
CS 3630, Fall 2026


Lecture 17:

Differential Drive Robots: Kinematics

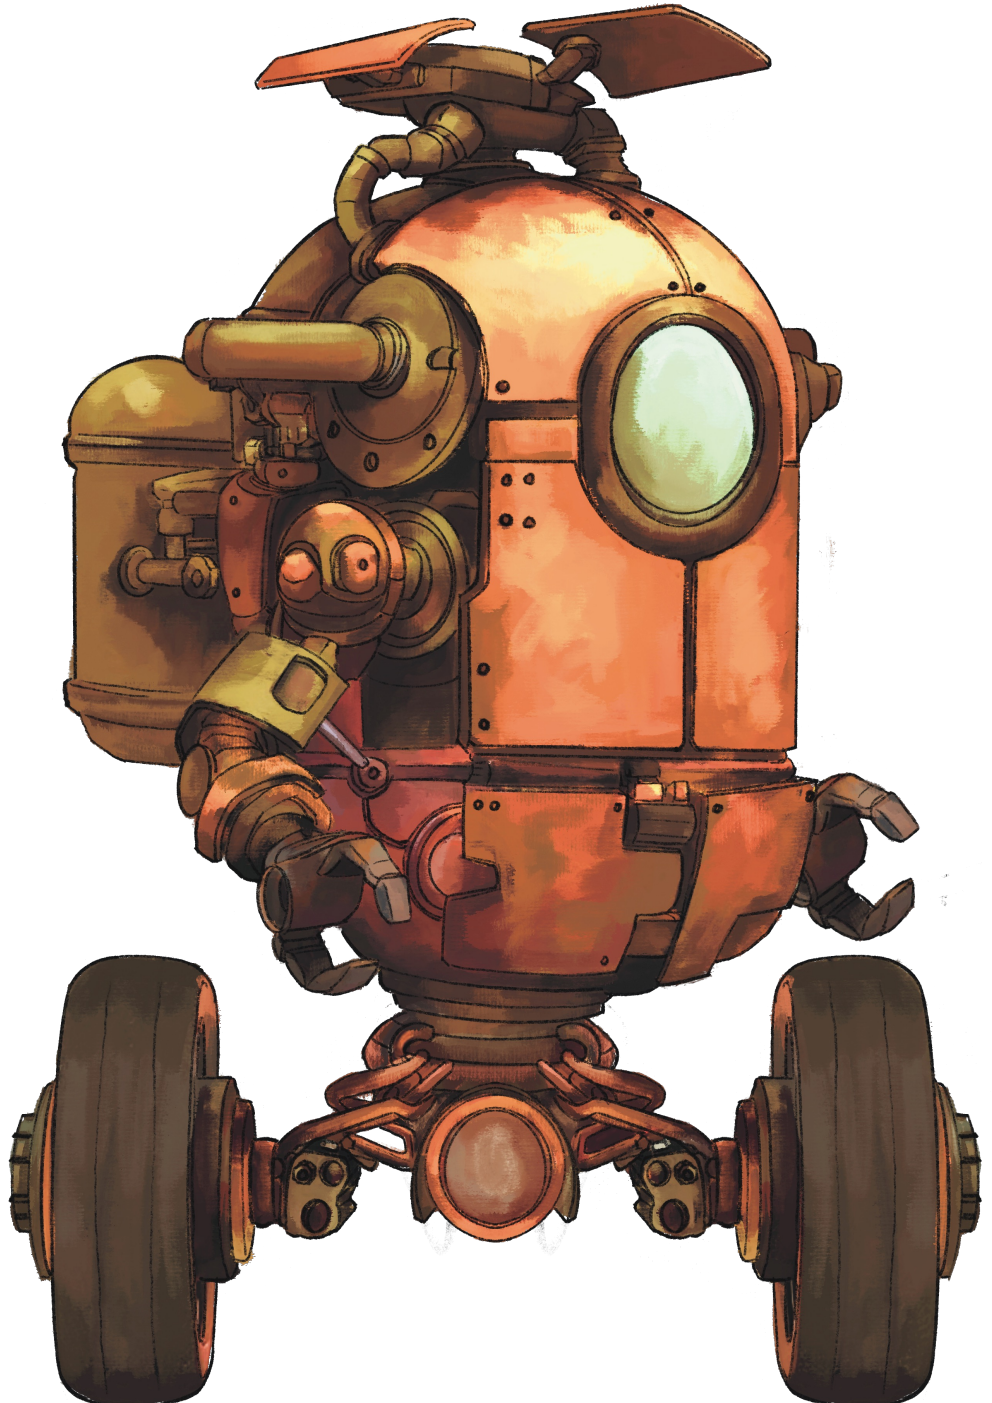

Outline

1. Differential Drive Robots
2. Configuration Space
3. Robot Velocity
4. Wheel Actuation
5. Kinematics Jacobians

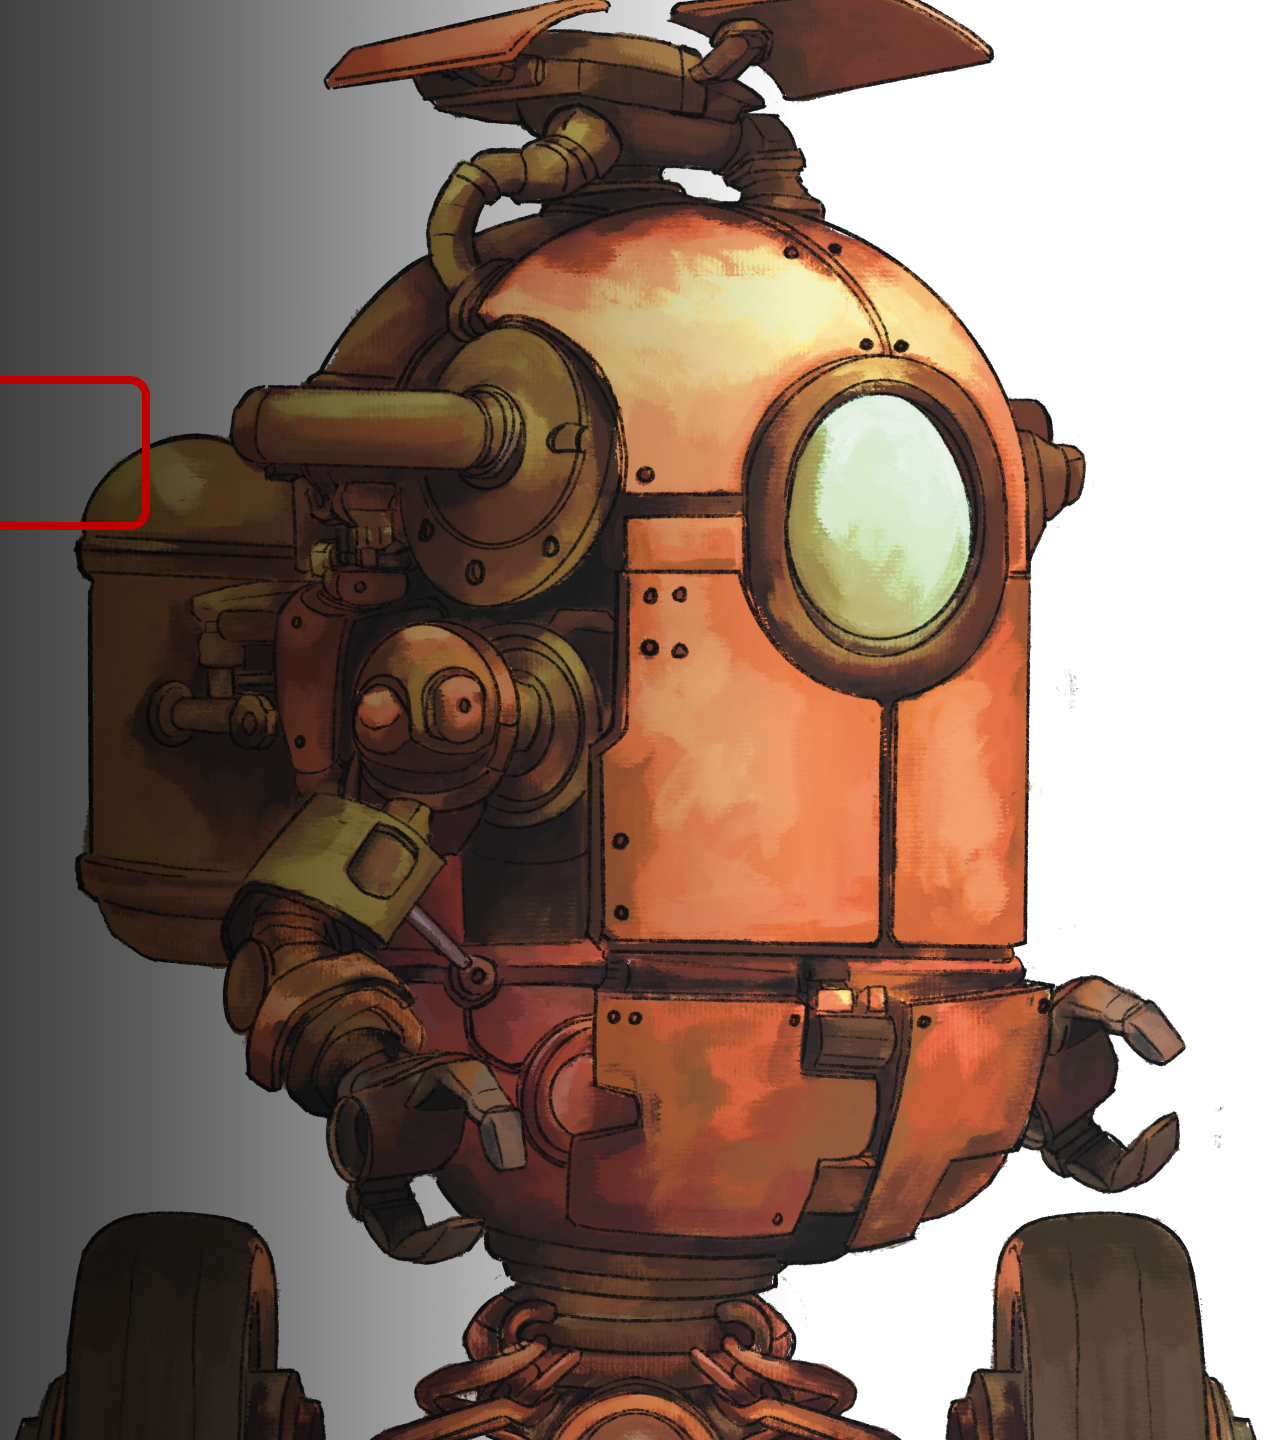


Kinematics of Differential Drive Robots

Our ***logistics robot*** had super simple kinematics:

- Thanks to omni-wheels, the logistics robot could roll in any direction at any time.
- Because of this, there was no need to pay attention to the orientation of the robot.
- We didn't really worry about a body-attached coordinate frame, since the robot frame was always parallel to the world frame.

Differential Drive Robots don't have omni-wheels…

- The kinematics (relationship between input commands and robot motion) are more interesting.
- We need to explicitly pay attention to the orientation.

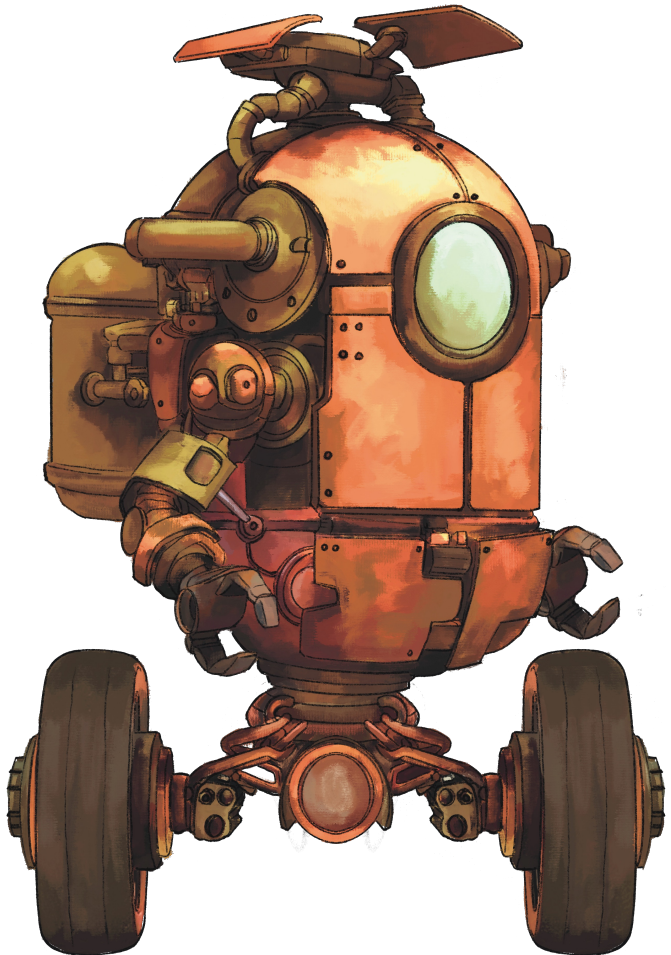



Mobile Robots


- There are many kinds of wheeled mobile robots.
- We have seen omni-directional robots.
- Now we'll study *differential drive robots*.

Mobile Robot Kinematics

- Relationship between input commands (e.g., wheel velocity) and pose of the robot, not considering forces. *If the wheels turn at a certain rate, what is the resulting robot motion?*
- No direct way to measure pose (unless we sensorize the environment), but we can integrate velocity (odometry) to obtain a good estimate.

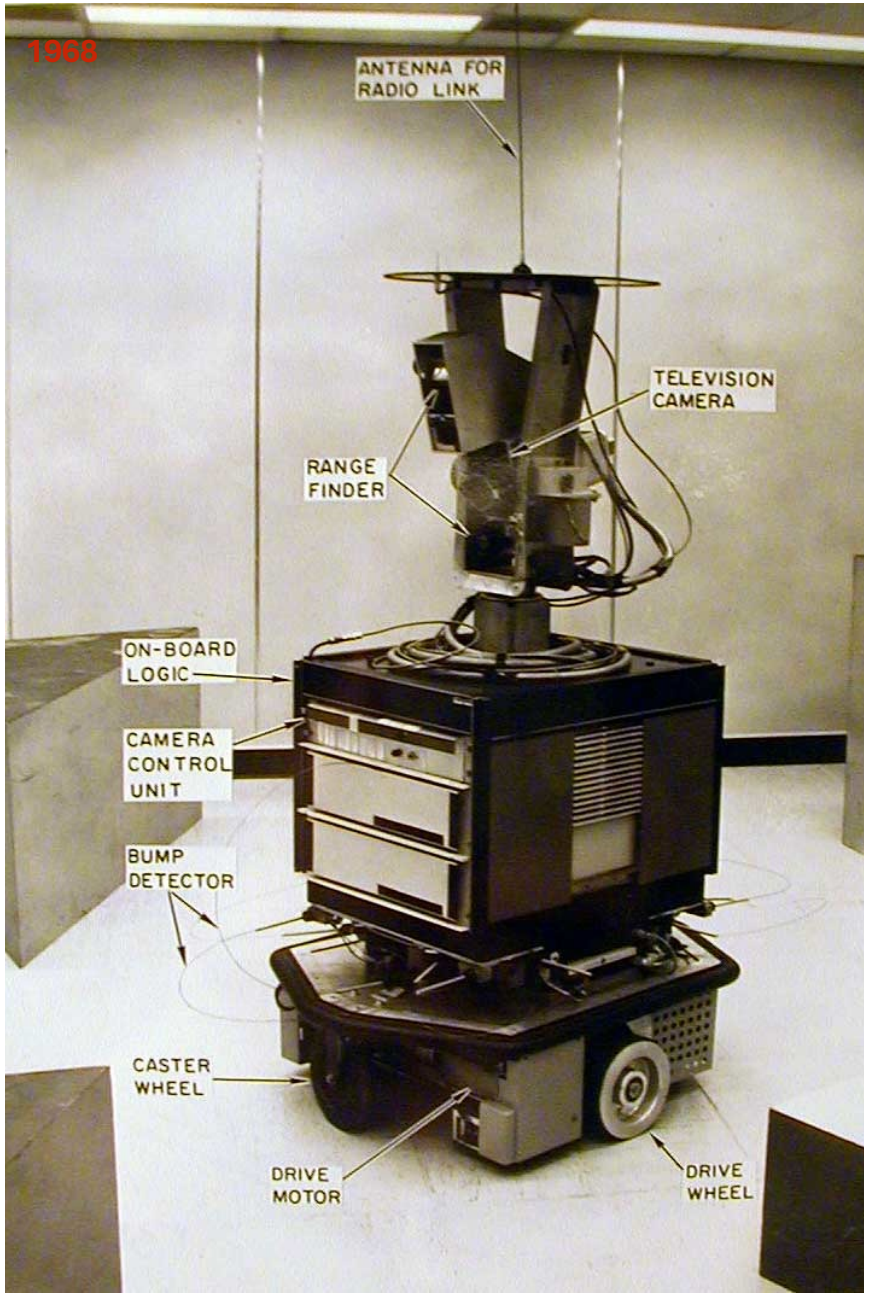
1968
ANTENNA FOR RADIO LINK
TELEVISION CAMERA
RANGE FINDER
ON-BOARD LOGIC
CAMERA CONTROL UNIT
BUMP DETECTOR
CASTER WHEEL
DRIVE MOTOR
DRIVE WHEEL

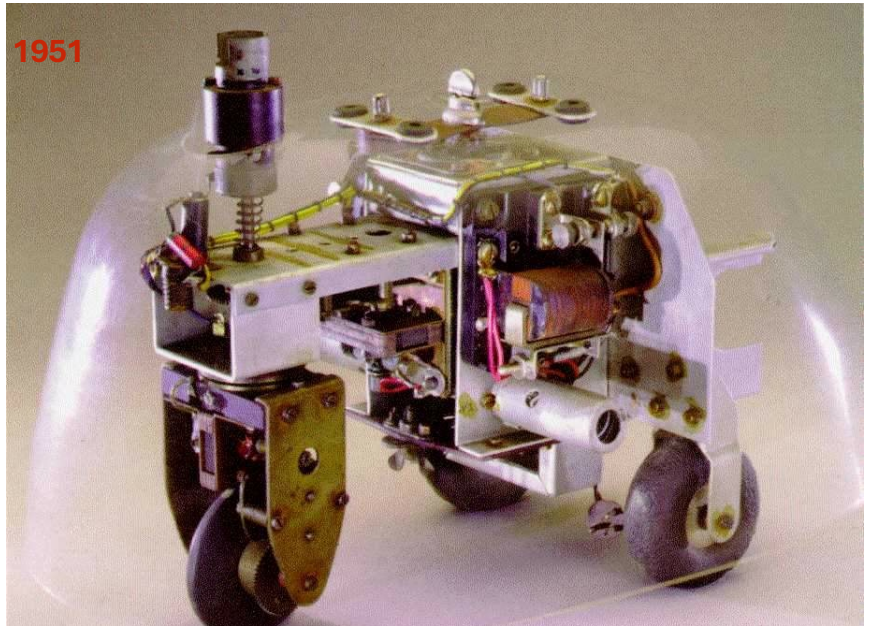
1951

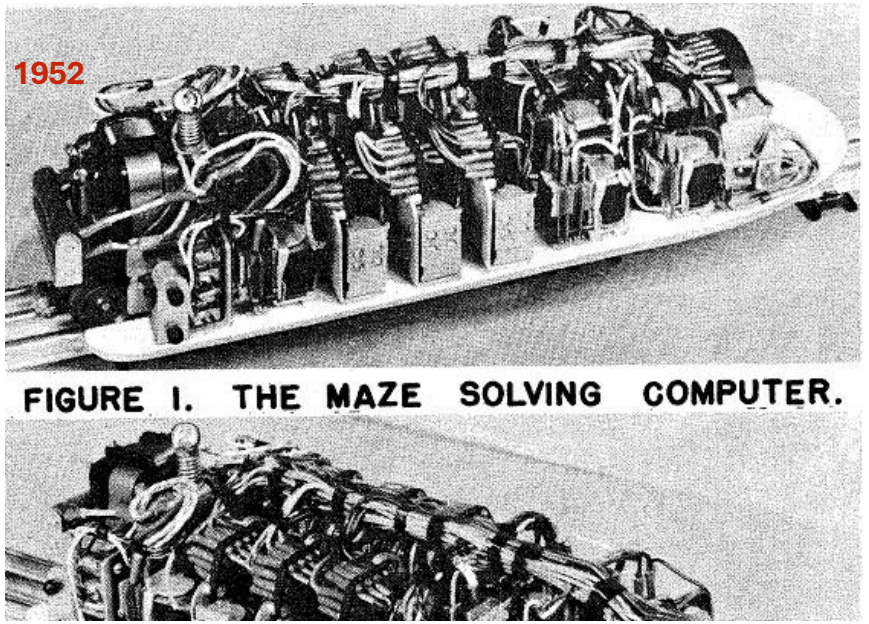
1952
FIGURE I. THE MAZE SOLVING COMPUTER.

More Modern AGVs









Differential Drive Robots








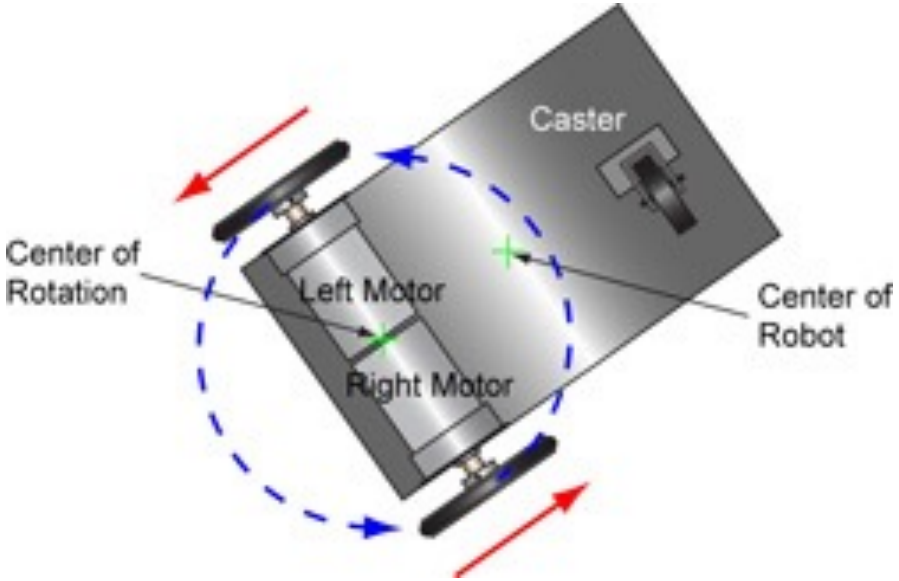

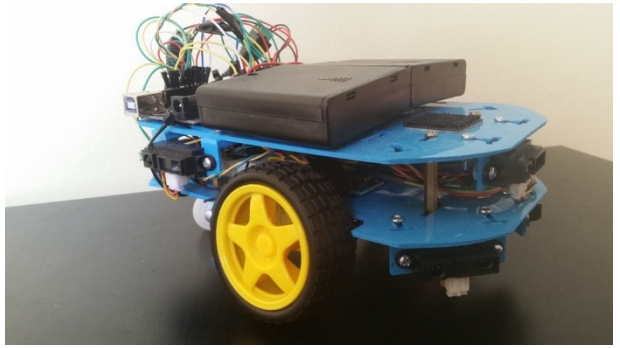

Two wheels with a common axis, and that can spin independently

The Duckiebot Platform

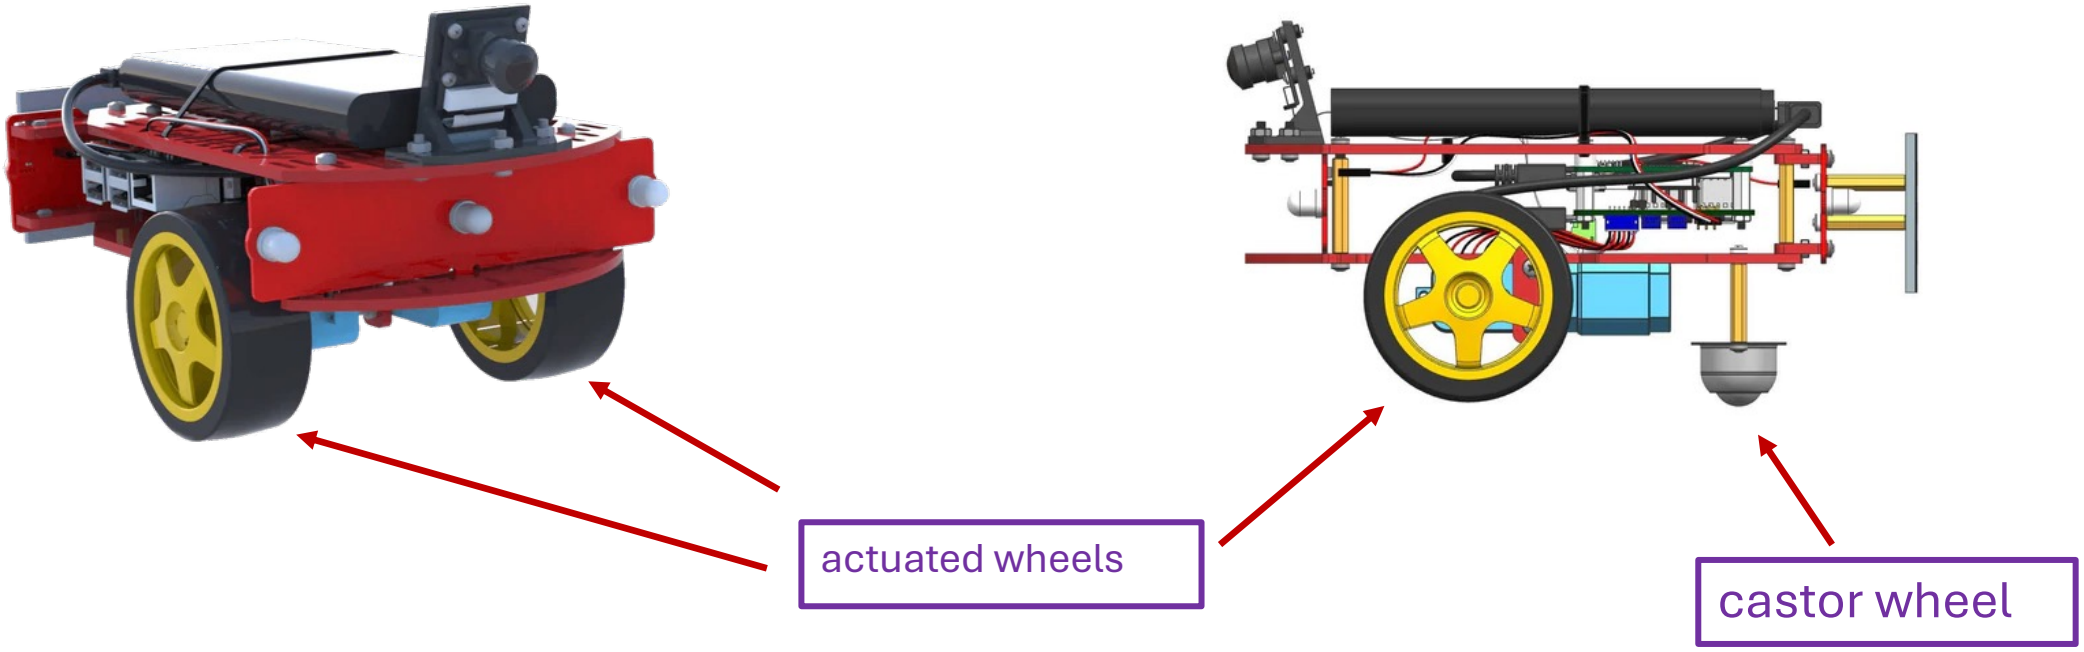



A typical DDR, with two actuated wheels in front,
and a passive castor wheel in the back.

Differential Drive Robots

Differential drive robots (aka DDRs):

- Two actuated wheels that share an axis
- A castor wheel that rotates freely, mainly to stabilize the robot (three points define a plane – castor wheel keeps the robot from tipping over).

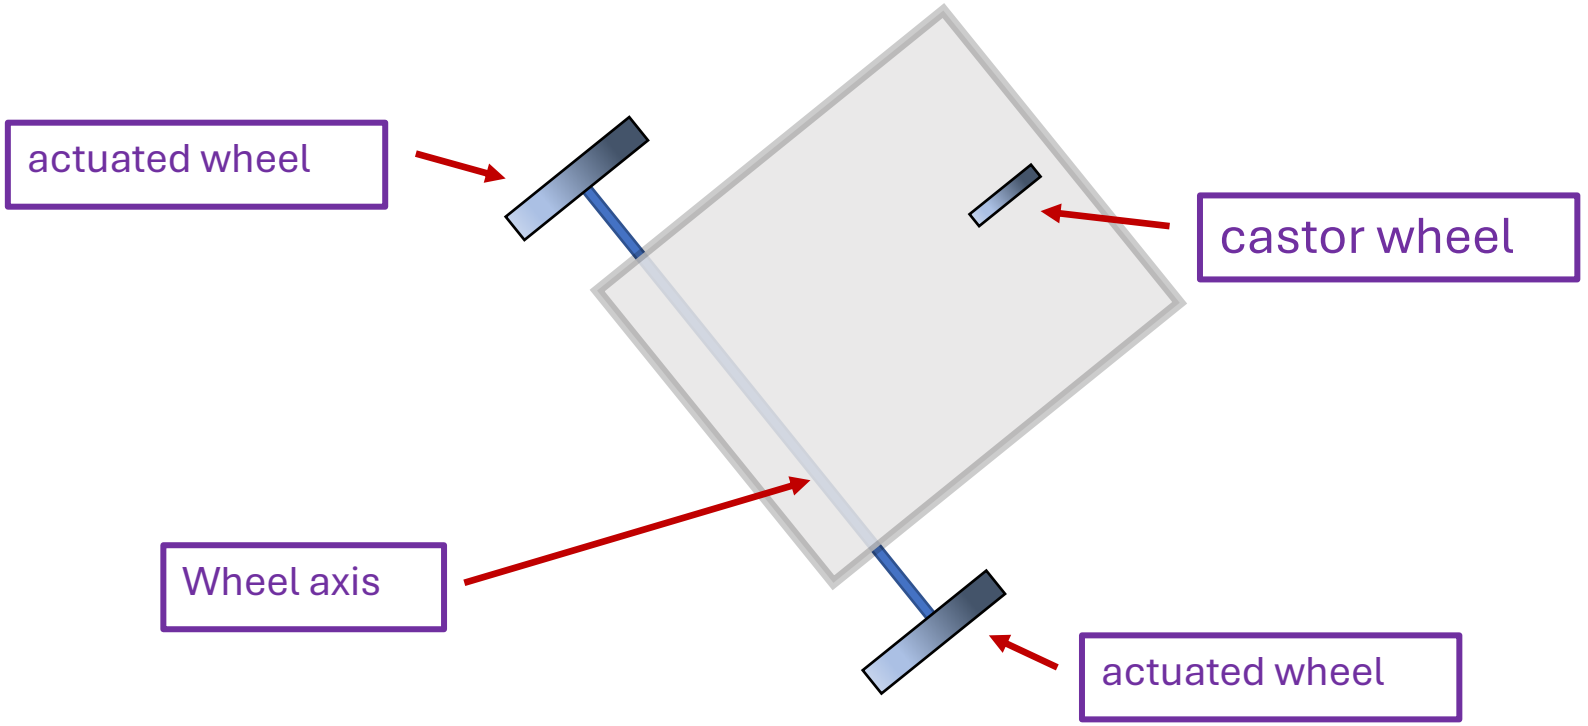


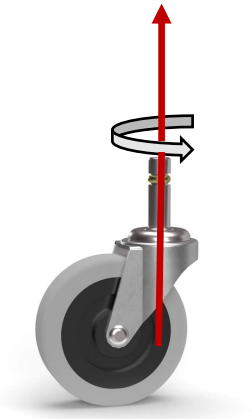


A castor wheel is able to spin freely about the vertical axis.

Outline

1. Differential Drive Robots
2. Configuration Space
3. Robot Velocity
4. Wheel Actuation
5. Kinematics Jacobians

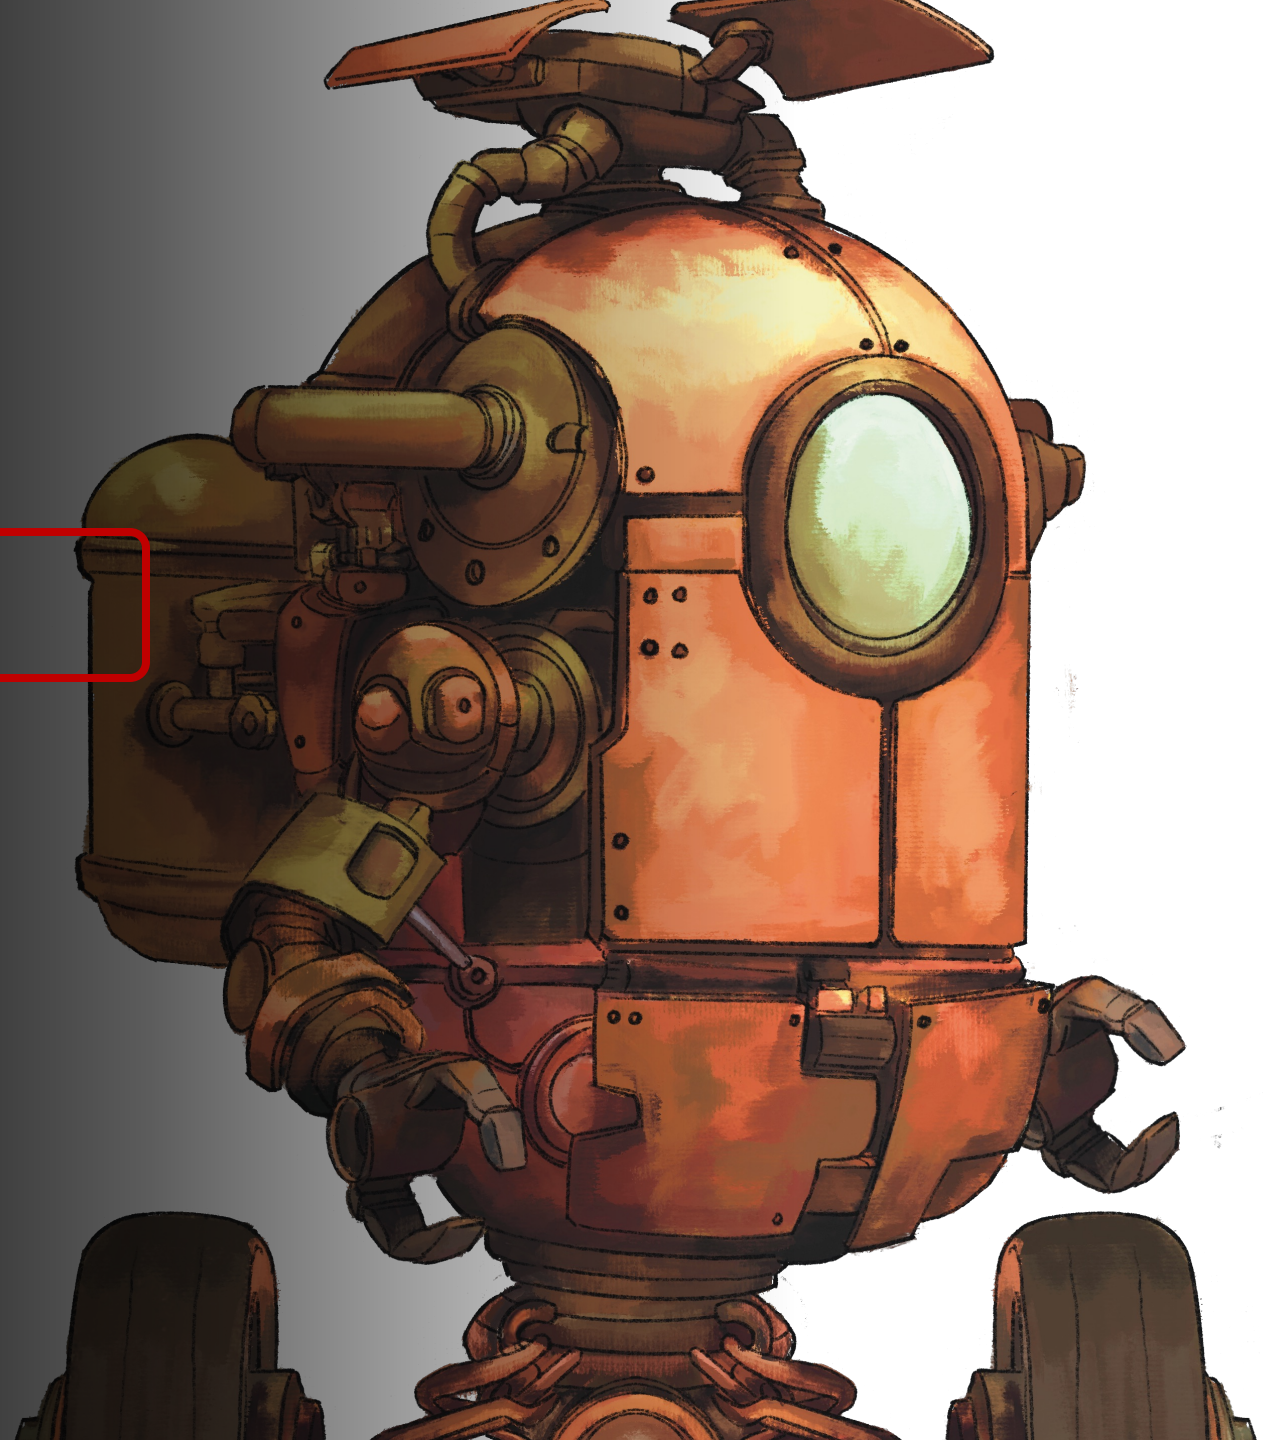

Differential Drive Robots

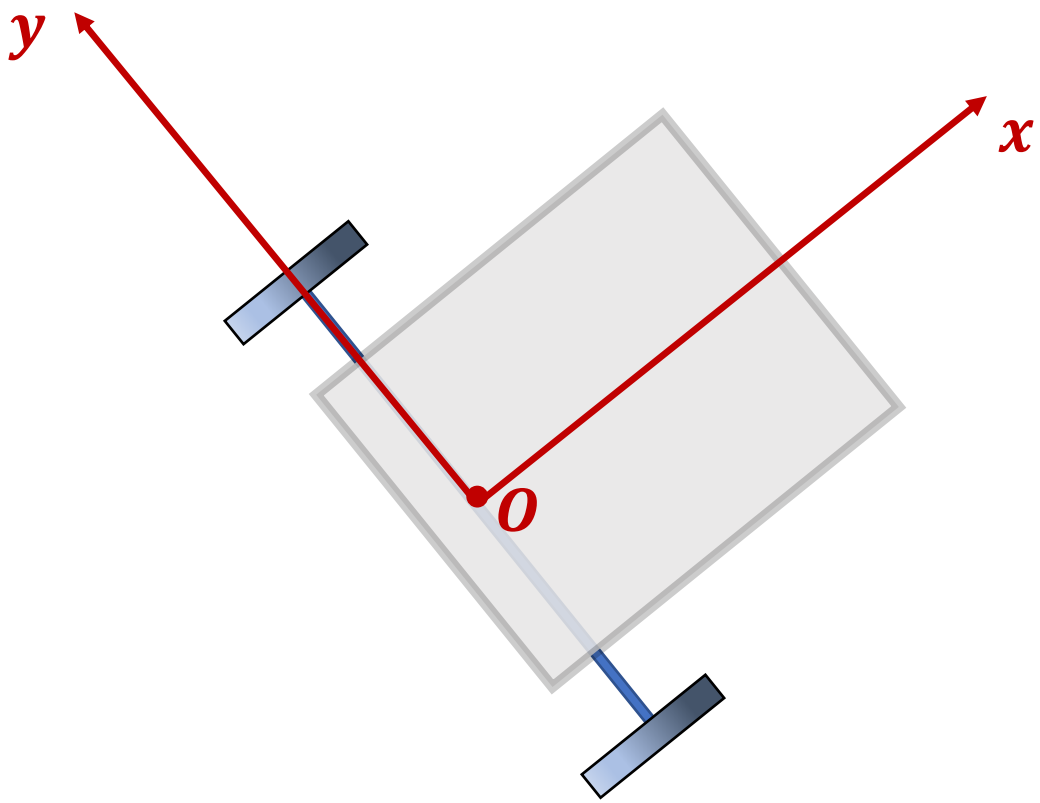

To specify the position and orientation of the DDR, we attach a coordinate frame to the robot.


- This frame is called the ***body-attached frame***, or the robot frame.
- The body attached frame is ***rigidly*** attached to the robot: it translates and rotates with the robot.
- The origin of the body-attached frame is located at the midpoint between the two wheels along their axis of rotation.
- The x-axis is the steering (or driving) direction of the robot.
- The y -axis is coincident with the common axis.

Configuration Space

- A ***configuration*** is a complete specification of the position of every point in a robot system.
- The ***configuration space*** is the set of all configurations.
- We use q to denote a point in a configuration space Q.

Example:

- Our logistics robot was able to translate in the plane.
- It's orientation never changed (i.e., it could not rotate).
- We can attach a coordinate frame with origin at the center of the robot, and axes parallel to the world x- and y-axes.
- If we know the x, y coordinates of this coordinate frame, we can easily determine the location of any desired point on the robot w.r.t. the world coordinate frame (in the x- y plane).

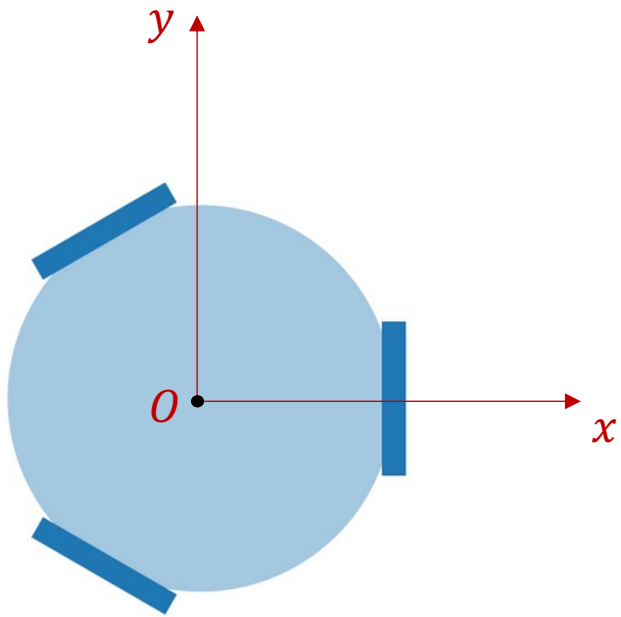


Configuration Space

- A ***configuration*** is a complete specification of the position of every point in a robot system.
- The ***configuration space*** is the set of all configurations.
- We use q to denote a point in a configuration space $\mathcal{Q}$.

Example:


- Our logistics robot was able to translate in the plane.
- It's orientation never changed (i.e., it could not rotate).
- We can attach a coordinate frame with origin at the center of the robot, and axes parallel to the world x- and y-axes.
- If we know the x, y coordinates of this coordinate frame, we can easily determine the location of any desired point on the robot w.r.t. the world coordinate frame (in the x- y plane).
- For example, if the robot has radius R, then the center of wheel 2 is:

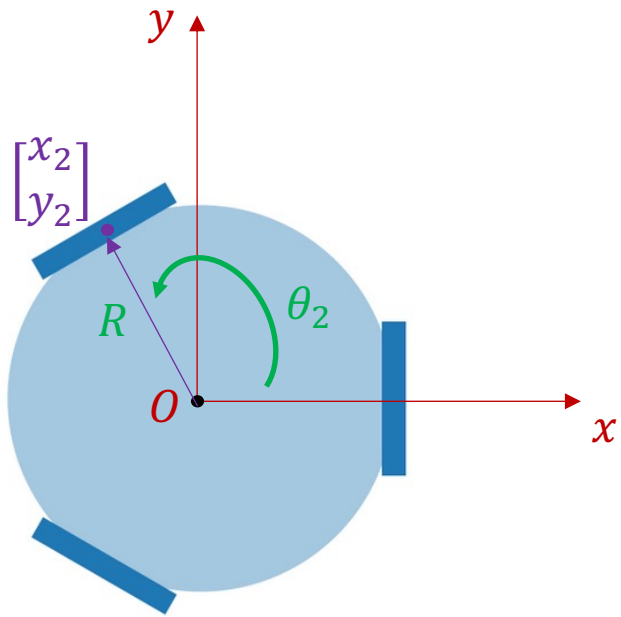

$$\begin{bmatrix} x_2 \\ y_2 \end{bmatrix} = \begin{bmatrix} x_{robot} + R\cos\theta_2 \\ y_{robot} + R\sin\theta_2 \end{bmatrix}$$

Configuration Space

- A ***configuration*** is a complete specification of the position of every point in a robot system.
- The ***configuration space*** is the set of all configurations.
- We use q to denote a point in a configuration space $\mathcal{Q}$.

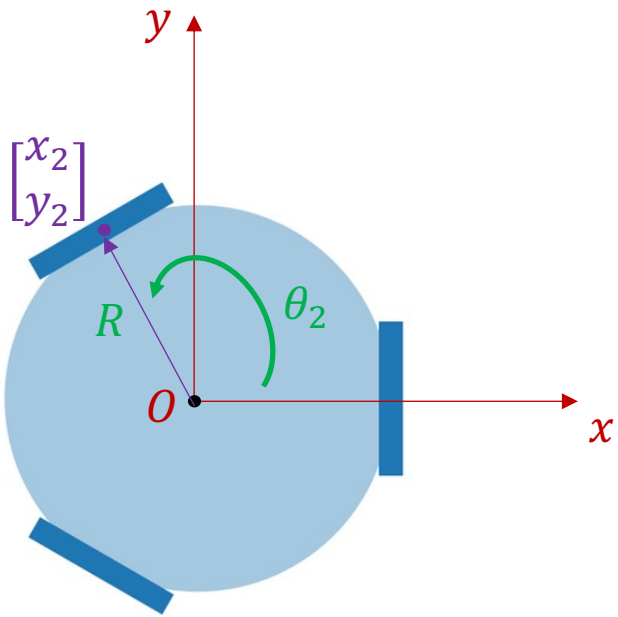


In this example, the configuration space is easy to characterize:

$$\mathcal{Q} = \mathfrak{D} \subset \mathbb{R}^2$$
$$q = (x, y) \in \mathfrak{D}$$

where $\mathfrak{D}$ is the floor space of the warehouse.

- Given $q = (x, y)$, we can calculate the position of ***any*** point on the robot.
- Note: This assumes, of course, that we have a model of our robot, which we do.

Configuration Space for a DDR

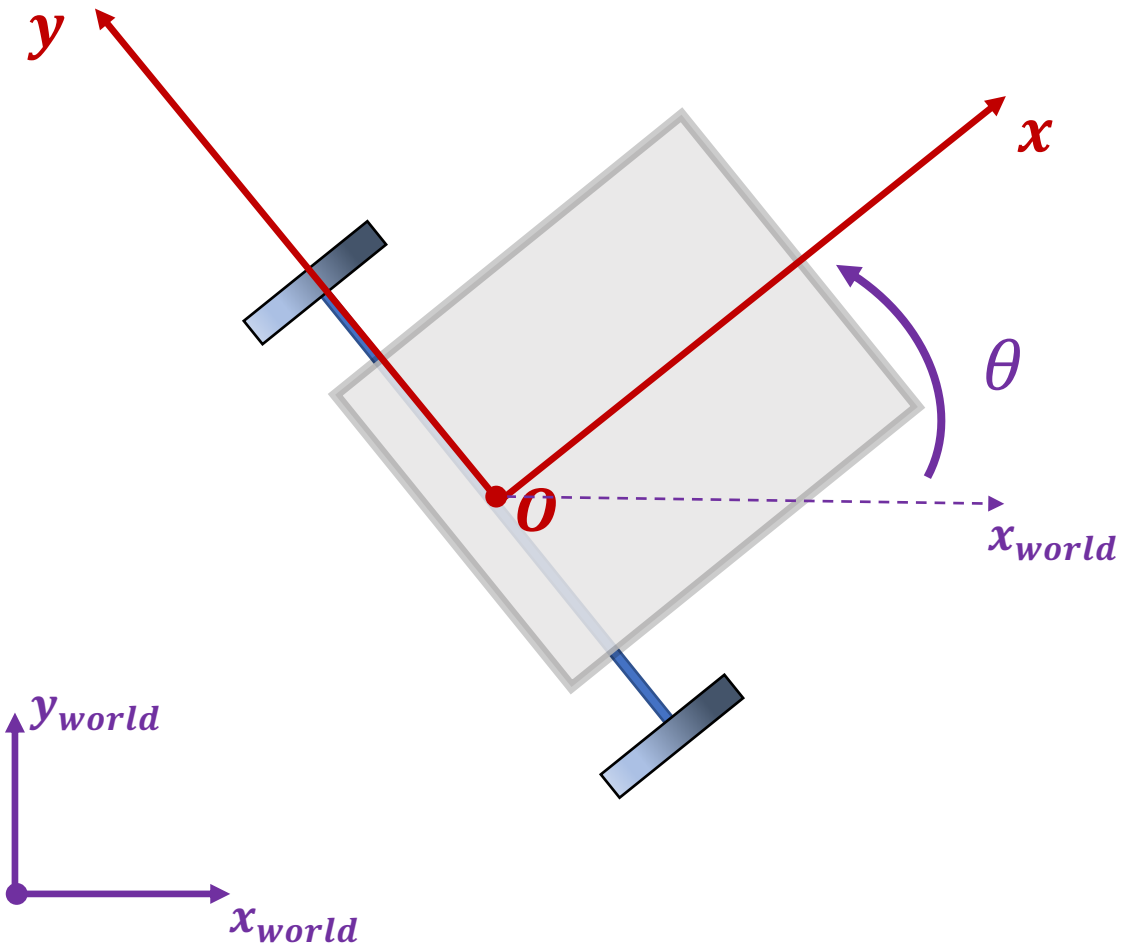

Because our DDR can rotate in the plane, it is necessary to know both the position and the orientation of the body-attached frame to specify a configuration:


$$Q = \mathbb{R}^2 \times [0, 2\pi)$$

$$q = (x, y, \theta) \in Q$$

If we know the configuration, $q = (x, y, \theta)$, we can compute the location of any point on the robot.

Let's start with the wheel centers.

Configuration Space for a DDR

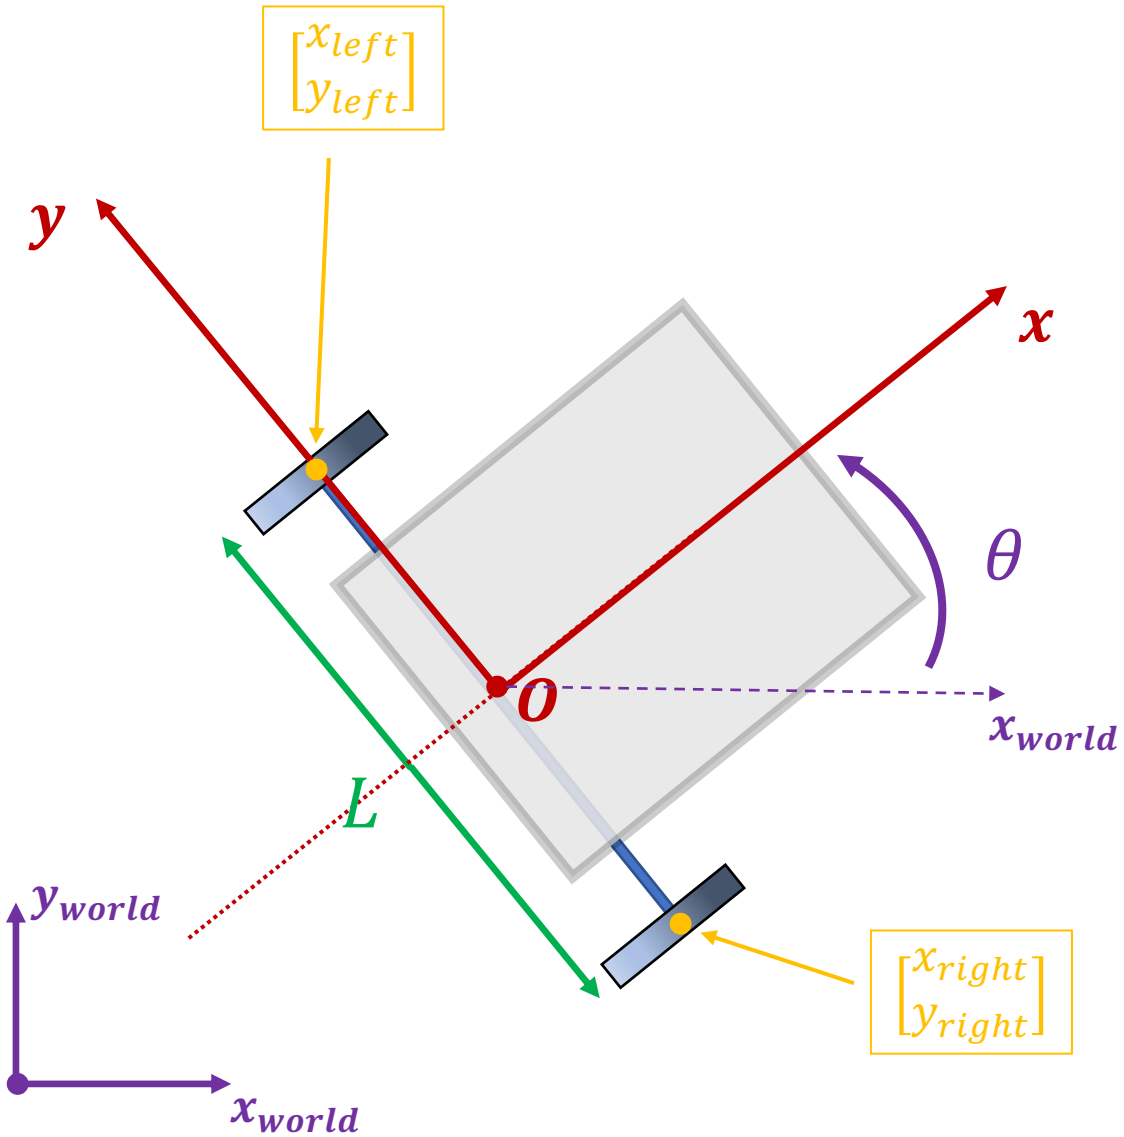


If the robot is in configuration $q = (x, y, \theta)$, the left and right wheel centers are located at:

$$\begin{bmatrix} x_{left} \\ y_{left} \end{bmatrix} = \begin{bmatrix} x - \frac{L}{2}\sin\theta \\ y + \frac{L}{2}\cos\theta \end{bmatrix}$$

and

$$\begin{bmatrix} x_{right} \\ y_{right} \end{bmatrix} = \begin{bmatrix} x + \frac{L}{2}\sin\theta \\ y - \frac{L}{2}\cos\theta \end{bmatrix}$$

Kinematics of DDRs

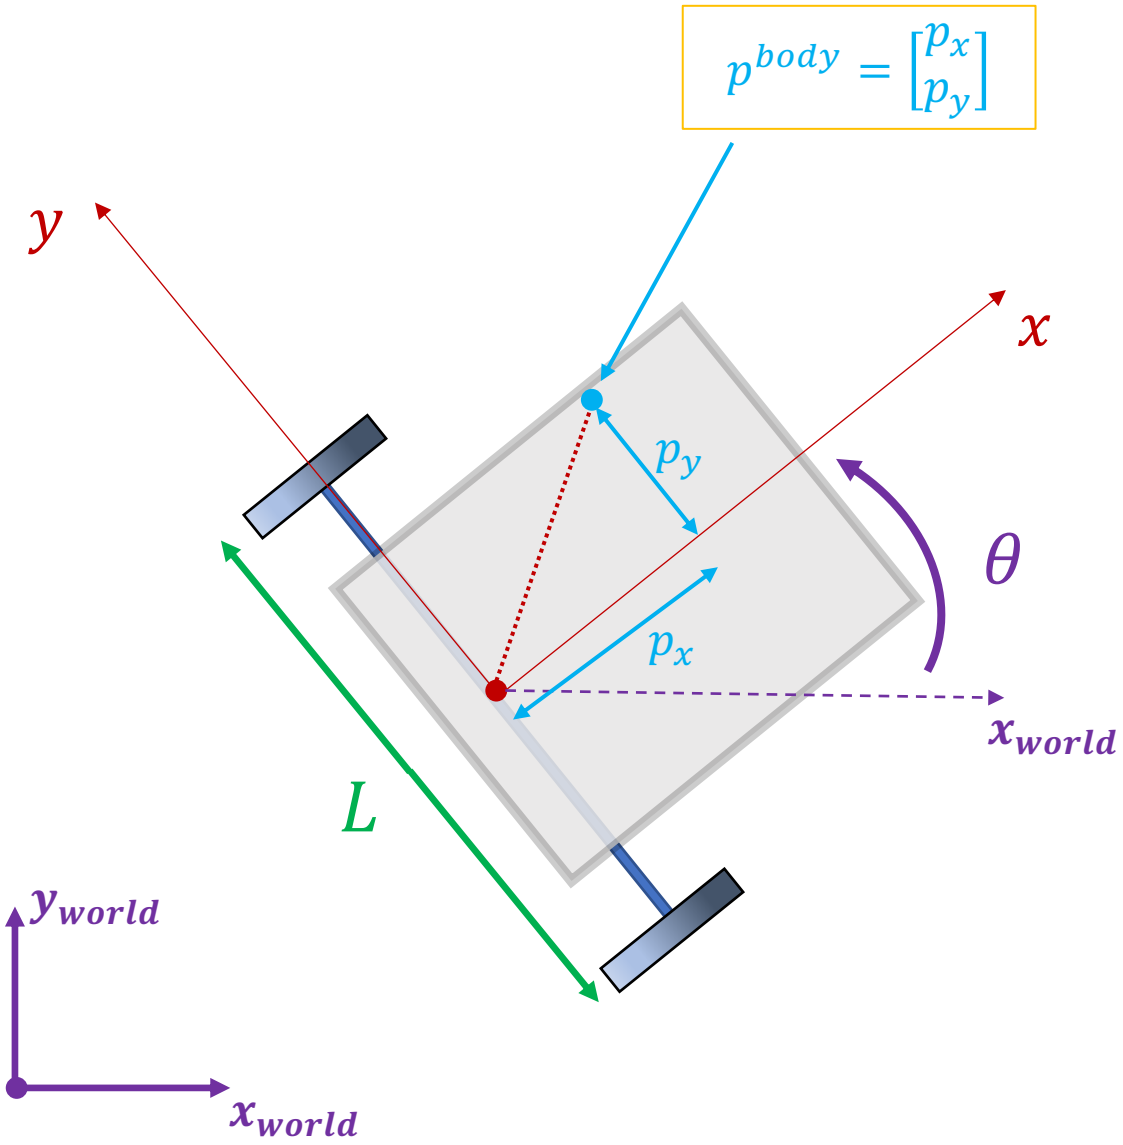

- We can generalize this to any point p on the DDR.
- Suppose the coordinates of p in the body frame are given by

$$p^{body} = \begin{bmatrix} p_x \\ p_y \end{bmatrix}$$


- If the robot is in configuration $q = (x, y, \theta)$, the coordinates of p in the world frame are given by:

$$p^{world} = \begin{bmatrix} x + p_x \cos\theta - p_y \sin\theta \\ y + p_x \sin\theta + p_y \cos\theta \end{bmatrix}$$


Soon, we will generalize this technique using homogeneous coordinate transformations… but not today.

Outline

1. Differential Drive Robots
2. Configuration Space
3. Robot Velocity
4. Wheel Actuation
5. Kinematics Jacobians

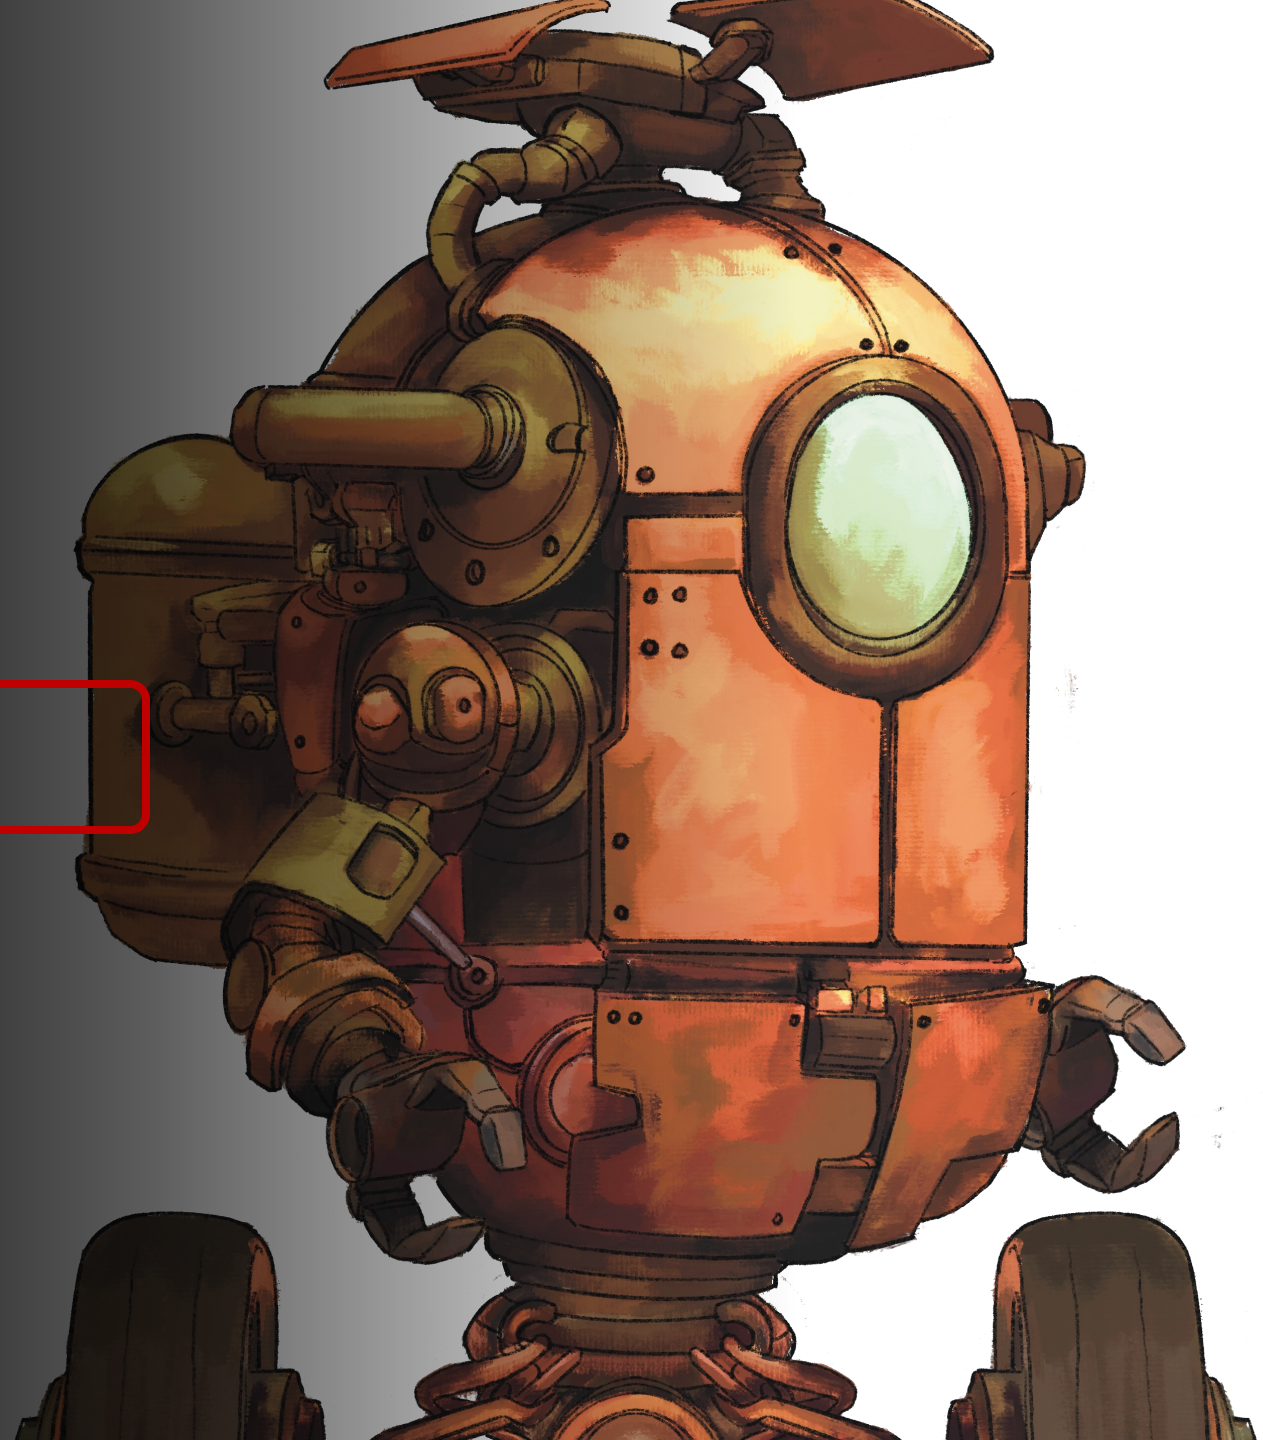

Linear Velocity of the DDR

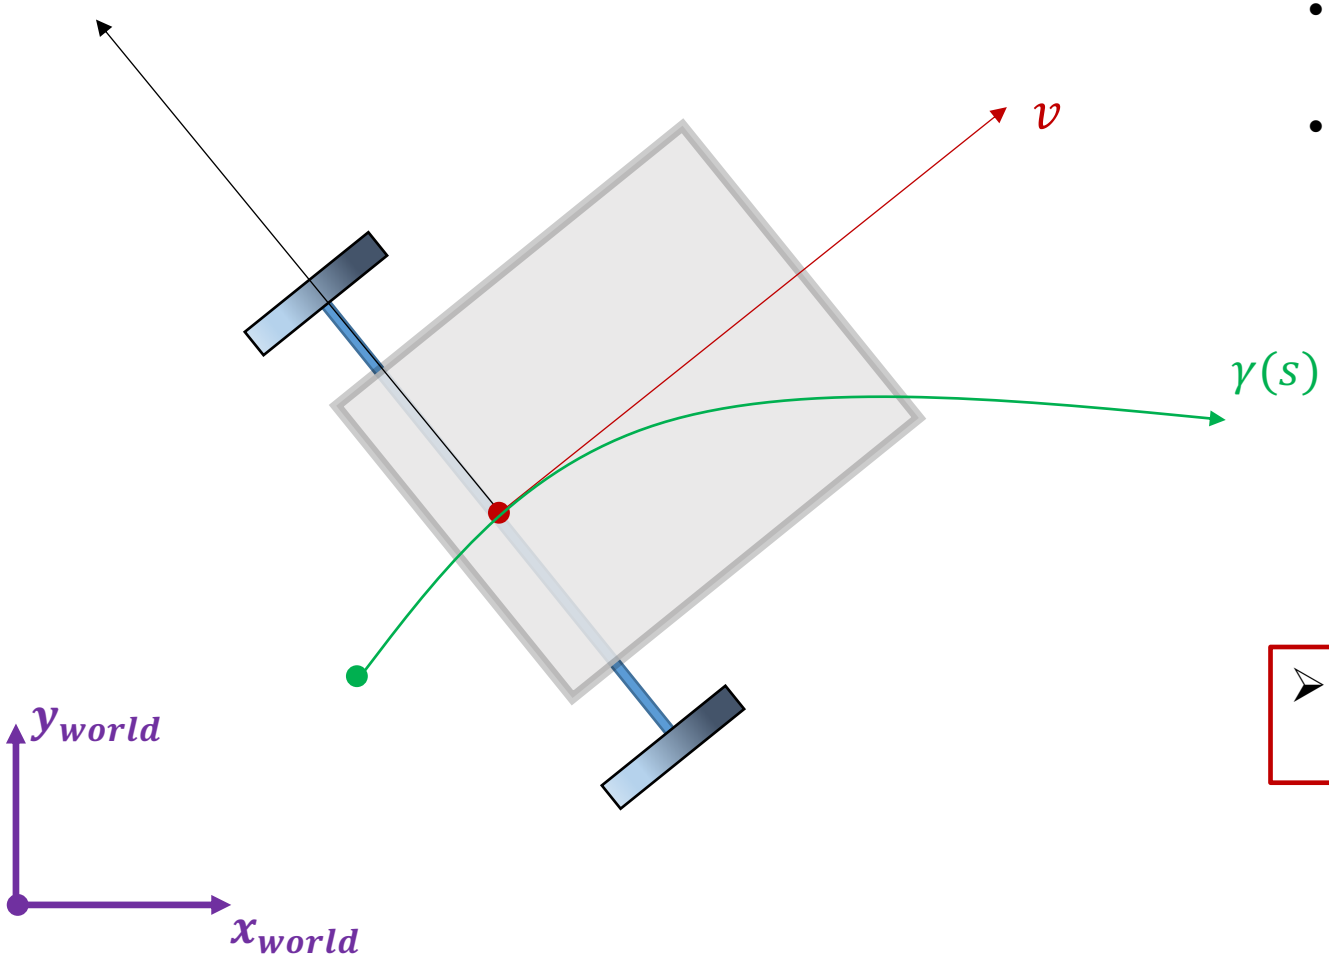


Differential Drive Robots are very different from robots with omni-wheels:

- The wheels roll without slipping – *no sideways motion*.
- The instantaneous velocity of the robot is always in the steering direction.
- The velocity perpendicular to the steering direction is always zero.

➢ If the robot follows the curve $\gamma(s)$, the instantaneous velocity v is tangent to γ.

Velocity of the DDR

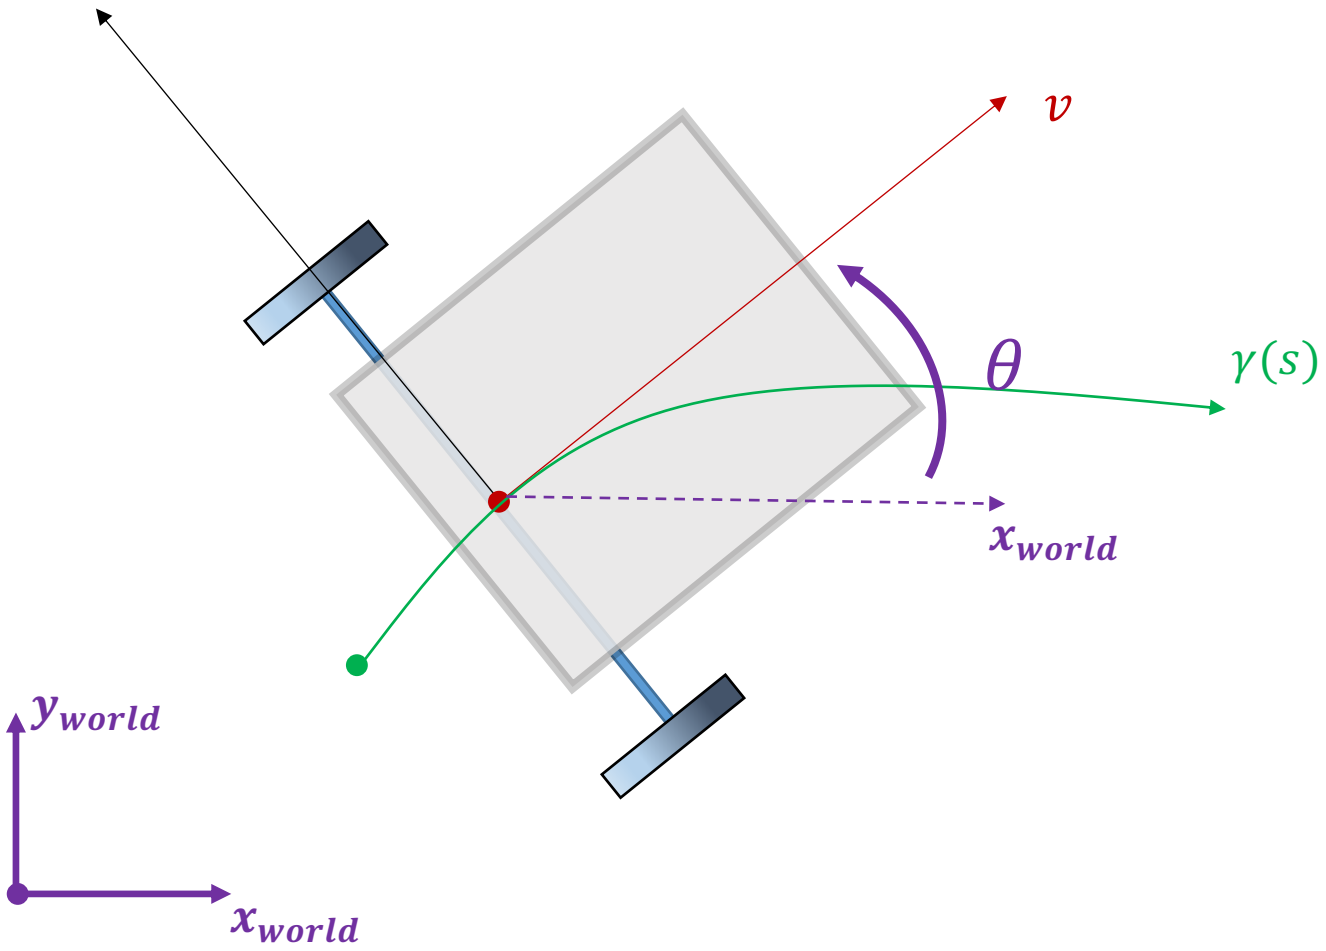

- Since the robot cannot move in the direction of the body-attached y-axis, its linear velocity, when expressed with respect to the body frame is:

$$v^{body,linear} = \begin{bmatrix} v_x \\ 0 \end{bmatrix}$$


- The steering direction, expressed w.r.t. the world frame, is given by:

$$\begin{bmatrix} \cos\theta \\ \sin\theta \end{bmatrix}$$

- Therefore, when the robot is in configuration $q(s) = (x, y, \theta)$, its linear velocity is expressed with respect to the world frame by:

$$v^{world,linear} = \begin{bmatrix} v_x \cos\theta \\ v_x \sin\theta \end{bmatrix}$$

Angular Velocity of the DDR

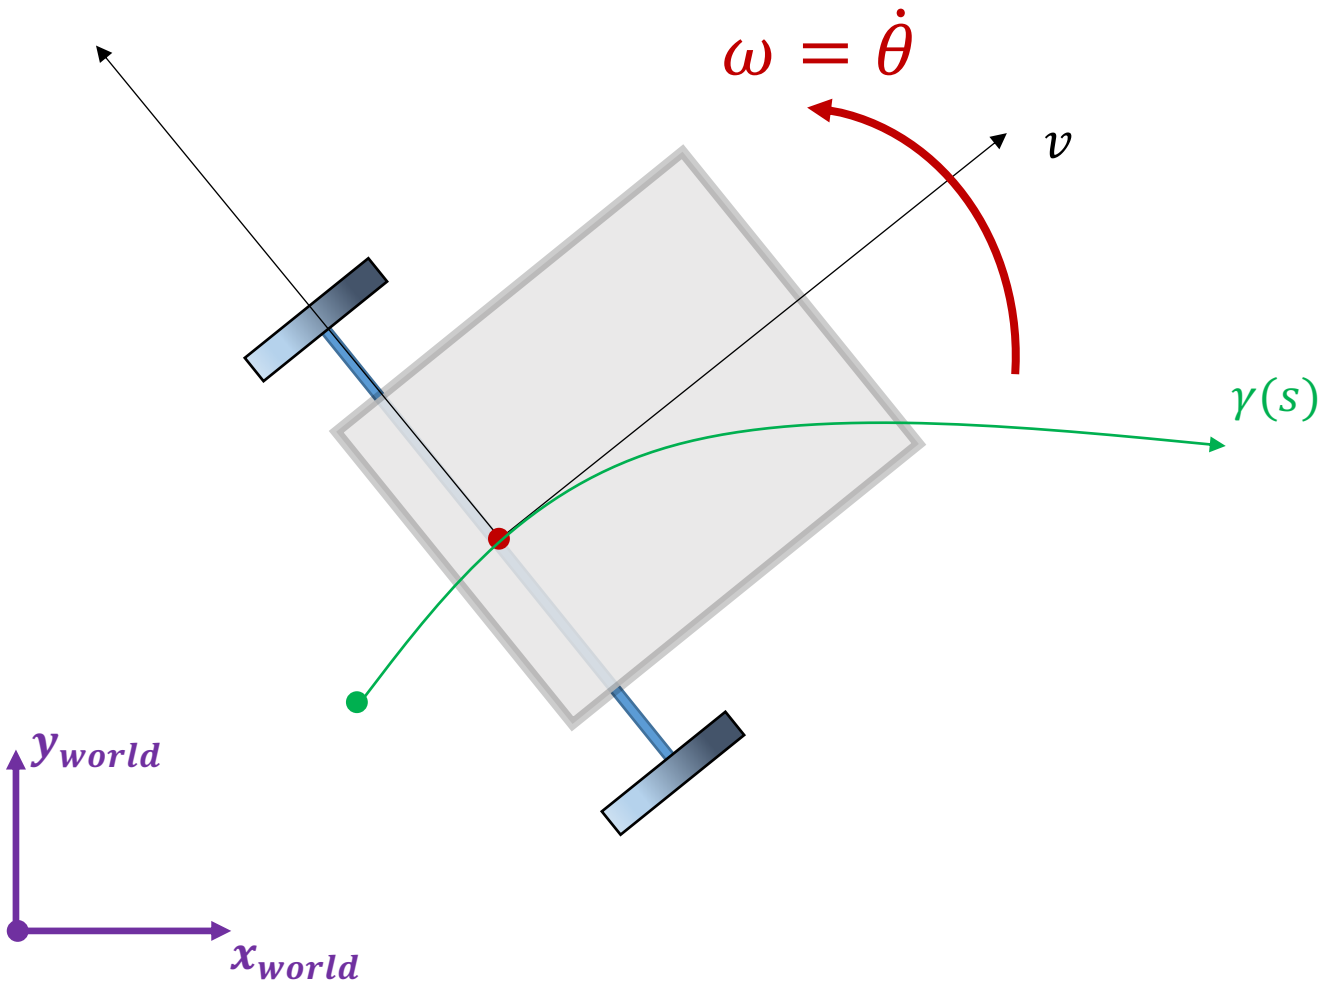

- The orientation of the robot is given by the angle θ.
- Since this robot is able to rotate, θ can be considered as a function of time.
- We define the robot's angular velocity as

$$\omega = \frac{d}{dt}\theta = \dot{\theta}$$

- Note that the positive sense for ω is defined using the right-hand rule: point the thumb of your right hand in the direction of the world z-axis, and your fingers will curl in the positive θ direction.

Total Velocity of the DDR


- The velocity of the DDR includes both the linear and angular velocities.
- We stack these into a single vector to describe the robot's instantaneous velocity w.r.t. the body frame of the world frame:

$$v^{body} = \begin{bmatrix} v_x \\ 0 \\ \dot{\theta} \end{bmatrix}, \qquad v^{world} = \begin{bmatrix} v_x \cos\theta \\ v_x \sin\theta \\ \dot{\theta} \end{bmatrix}$$

➢ Note that the z-axis of the body-attached frame ***is the same as*** the z-axis of the world frame, so that the angular velocity is given by $\dot{\theta}$ for both of these coordinate frames.


Outline

1. Differential Drive Robots
2. Configuration Space
3. Robot Velocity
4. Wheel Actuation
5. Kinematics Jacobians

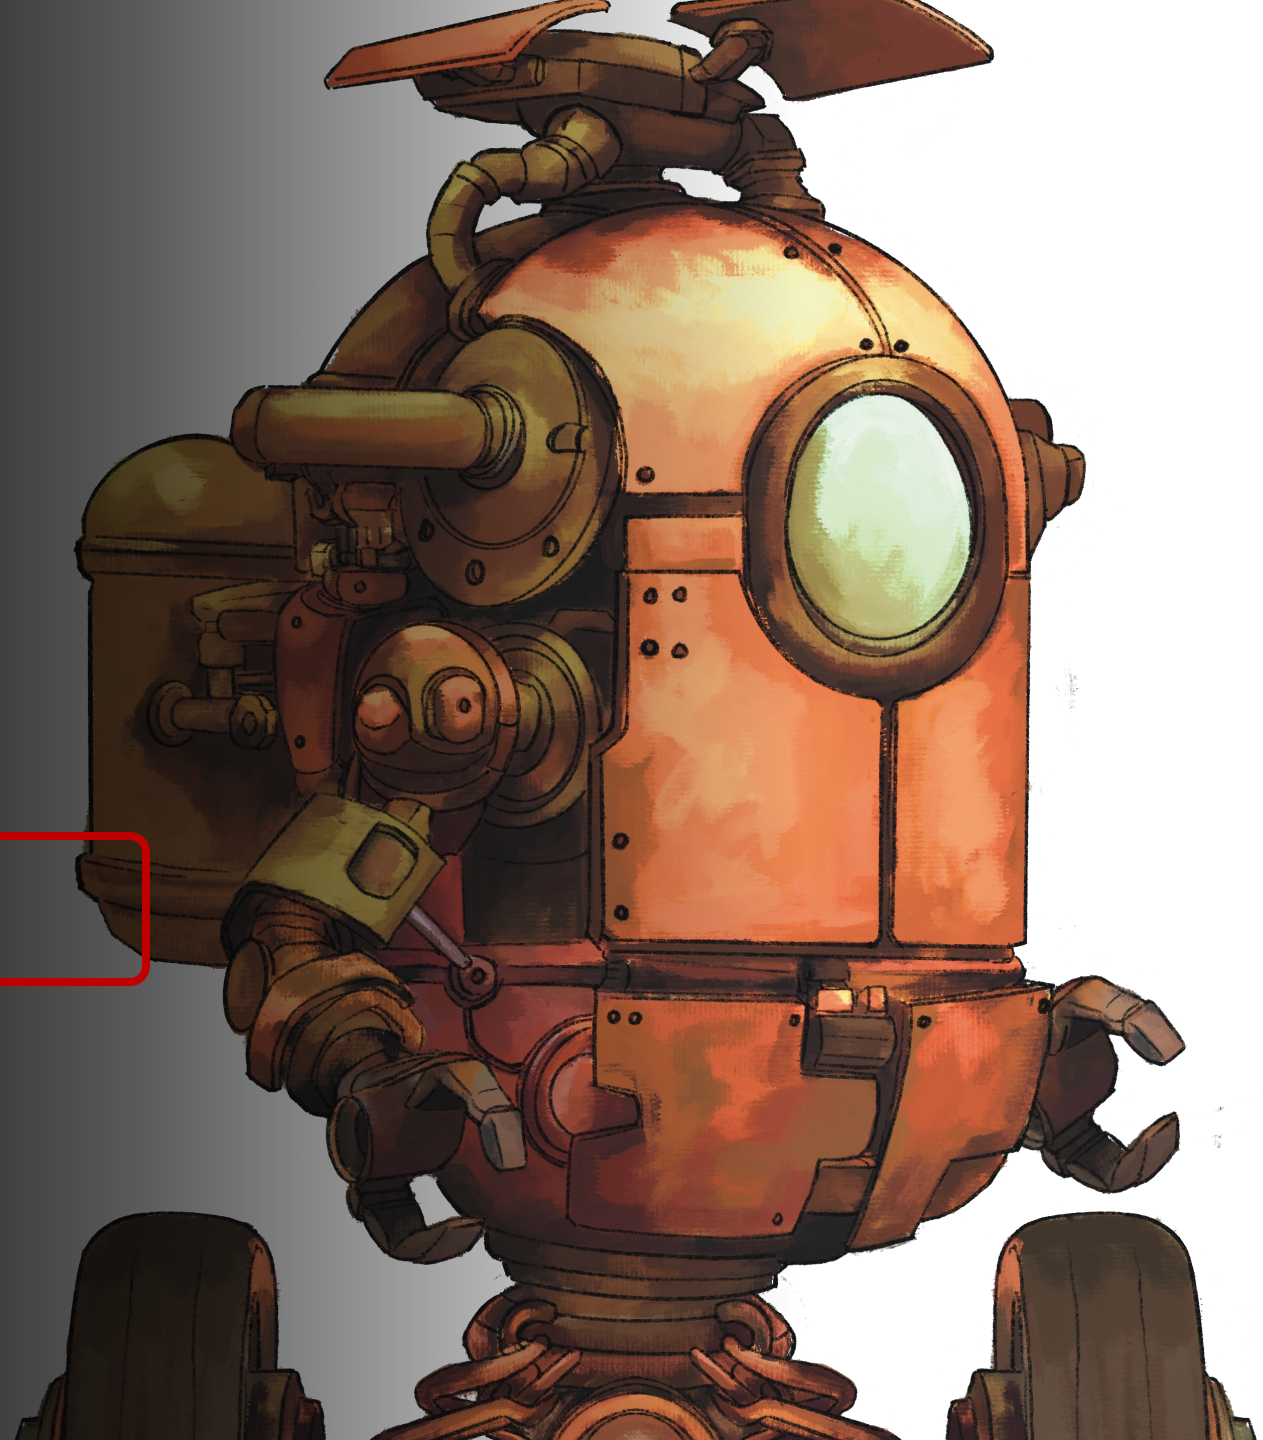

Wheel Actuation and DDR Velocity

- The two wheels of the DDR are independently actuated, and able to spin in both directions.
- Let ϕ_R and ϕ_L denote the instantaneous orientation of the right and left wheels (e.g., the angle from the world z-axis to some identifiable mark on the wheel.
- The angular speeds of the wheels are therefore given by $\dot{\phi}_R$ and $\dot{\phi}_L$.

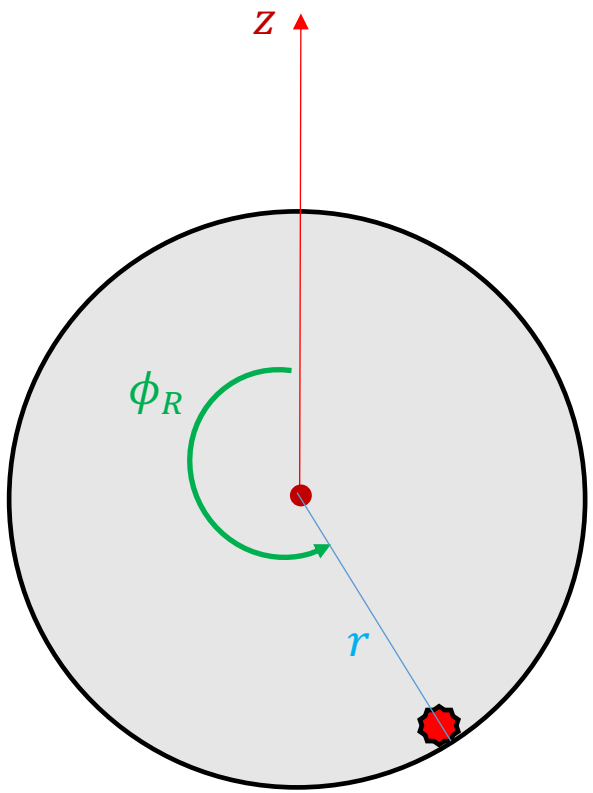

As we saw with the omni-directional robot, the relationship between forward speed of the wheel and its angular speed is given by


$$\frac{\mathrm{d}}{\mathrm{dt}}x = r\dot{\phi}$$

and therefore, since the wheel rolls without slipping, and $v_y = 0$, we have

$$\dot{\phi} = \frac{v_x}{r}$$

Wheel Actuation and DDR Velocity

When the two wheels turn with the same angular speed, $\dot{\phi}_R = \dot{\phi}_L$, the robot moves with pure translation.

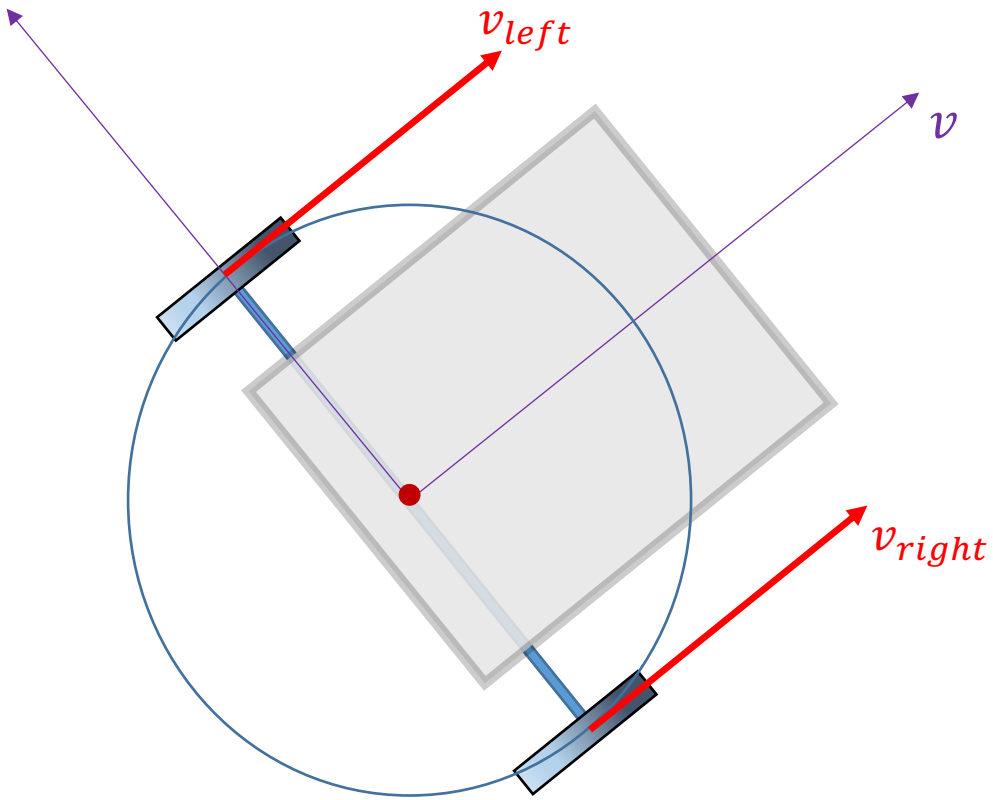

In this case,


- $v_{left} = v_{right}$
- Both v_{left} and v_{right} are parallel to the steering direction.
- The robot's angular velocity is zero (i.e., $\omega = 0$).
- The angular wheel speed is related to the robot's linear velocity by

$$\dot{\phi}_R = \dot{\phi}_L = \frac{v_x}{r}$$

Total DDR Velocity

When the two wheels turn with the opposite angular velocity, $\dot{\phi}_R = -\dot{\phi}_L$,

the robot moves with pure rotation.

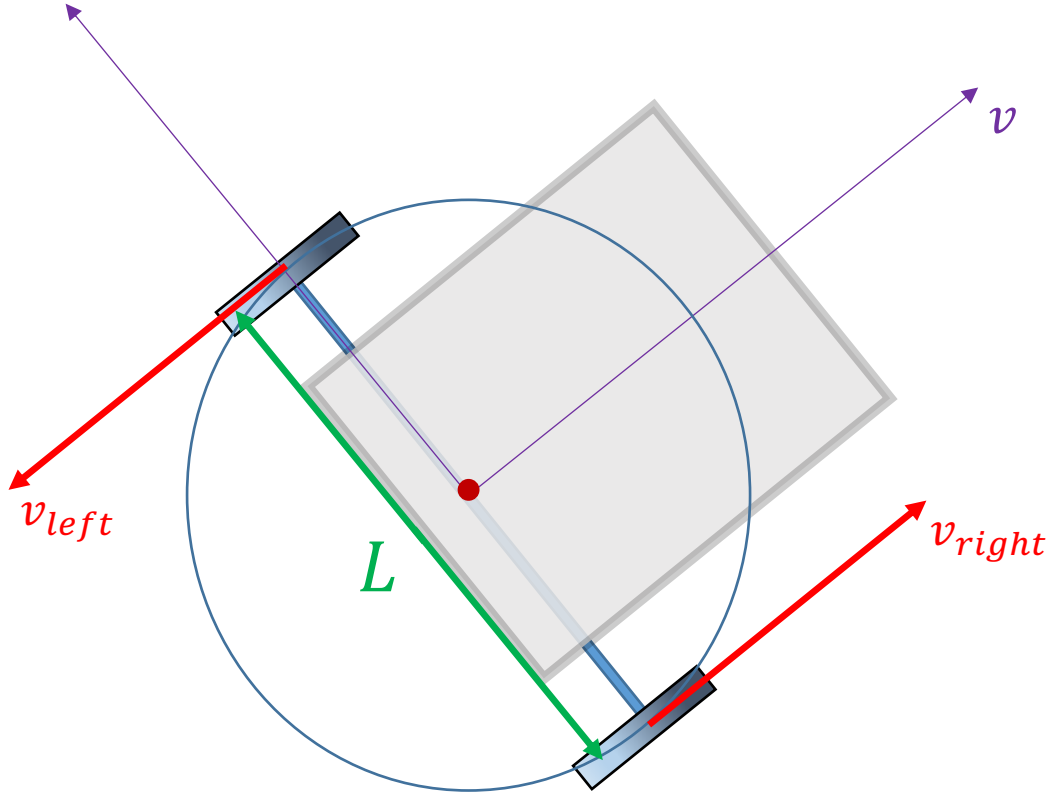

In this case,

- $v_{left} = -r\dot{\phi}_L$ and $v_{right} = r\dot{\phi}_R$
- Both v_{left} and v_{right} are tangent to the circle centered at the origin of the body-attached frame w/radius $0.5L$.
- The robot's angular velocity satisfies *the eqn for circular motion*:

$$\frac{L}{2}\omega = v_{right} = r\dot{\phi}_R$$

and


$$\frac{L}{2}\omega = -v_{left} = -r\dot{\phi}_L$$

- Rearranging terms, we obtain:

$$\dot{\phi}_R = \frac{L}{2}\frac{\omega}{r} \quad \text{and} \quad \dot{\phi}_L = -\frac{L}{2}\frac{\omega}{r}$$

Wheel Actuation and DDR Velocity

All other velocities are linear combinations of these two cases, and therefore we can apply superposition.

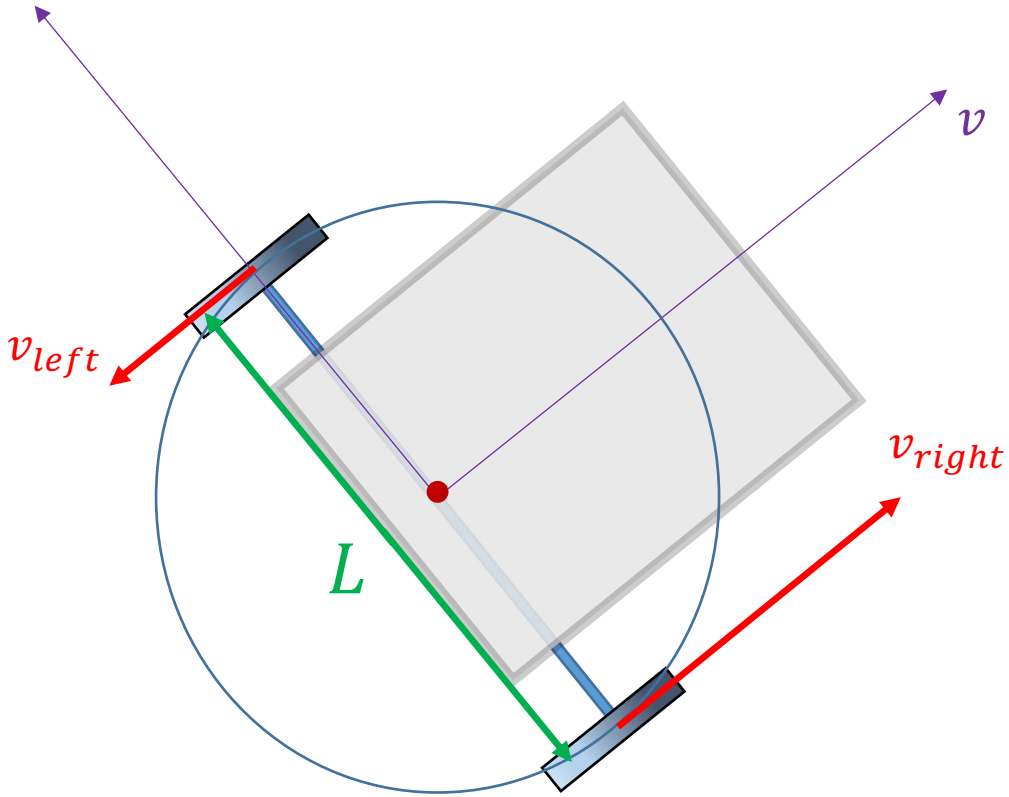

- For pure translation we have:

$$\dot{\phi}_R = \frac{v_x}{r} \quad \text{and} \quad \dot{\phi}_L = \frac{v_x}{r}$$

- For pure rotation we have:

$$\dot{\phi}_R = \frac{L}{2}\frac{\omega}{r} \quad \text{and} \quad \dot{\phi}_L = -\frac{L}{2}\frac{\omega}{r}$$


- Combining (adding) the two equations for $\dot{\phi}_R$ and $\dot{\phi}_L$ we obtain:

$$\dot{\phi}_R = \frac{L}{2}\frac{\omega}{r} + \frac{v_x}{r} \quad \text{and} \quad \dot{\phi}_L = -\frac{L}{2}\frac{\omega}{r} + \frac{v_x}{r}$$

➢ ***These two equations tell us how to choose $\dot{\phi}_R$ and $\dot{\phi}_L$ to achieve a desired velocity v, ω.***

Wheel Actuation and DDR Velocity

All other velocities are linear combinations of these two cases, and therefore we can apply superposition.

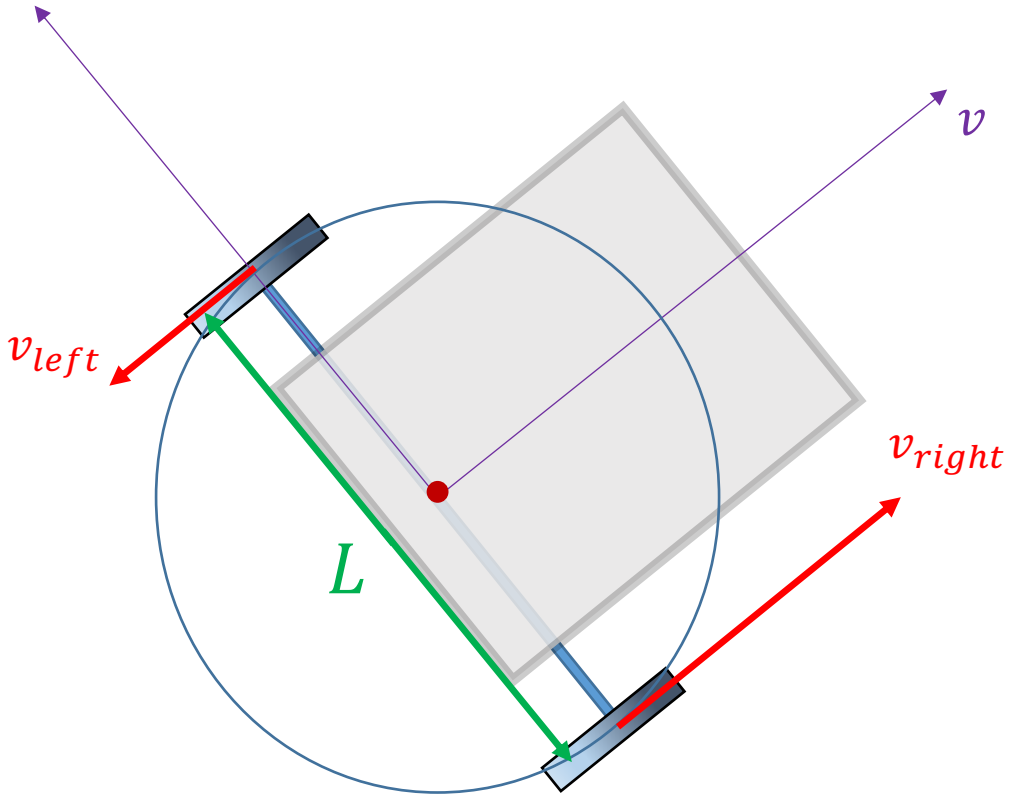

- The equations

$$\dot{\phi}_R = \frac{L}{2}\frac{\omega}{r} + \frac{v_x}{r} \quad \text{and} \quad \dot{\phi}_L = -\frac{L}{2}\frac{\omega}{r} + \frac{v_x}{r}$$


  are sometimes called *inverse* equations, since they solve the inverse problem: "what wheel speed (*input*) to I need to achieve a desired robot behavior (*output*)?"
- We can easily compute the *forward* mapping, from $\dot{\boldsymbol{\phi}}_{\boldsymbol{R}}$ and $\dot{\boldsymbol{\phi}}_{\boldsymbol{L}}$ to $\boldsymbol{v}, \boldsymbol{\omega}$ using simple algebra:

$$\dot{\phi}_R + \dot{\phi}_L = 2\frac{v_x}{r} \Rightarrow v_x = \frac{r}{2}\left(\dot{\phi}_R + \dot{\phi}_L\right)$$


$$\dot{\phi}_R - \dot{\phi}_L = \frac{L\omega}{r} \Rightarrow \omega = \frac{r}{L}\left(\dot{\phi}_R - \dot{\phi}_L\right)$$

Outline

1. Differential Drive Robots
2. Configuration Space
3. Robot Velocity
4. Wheel Actuation
5. Kinematics Jacobians

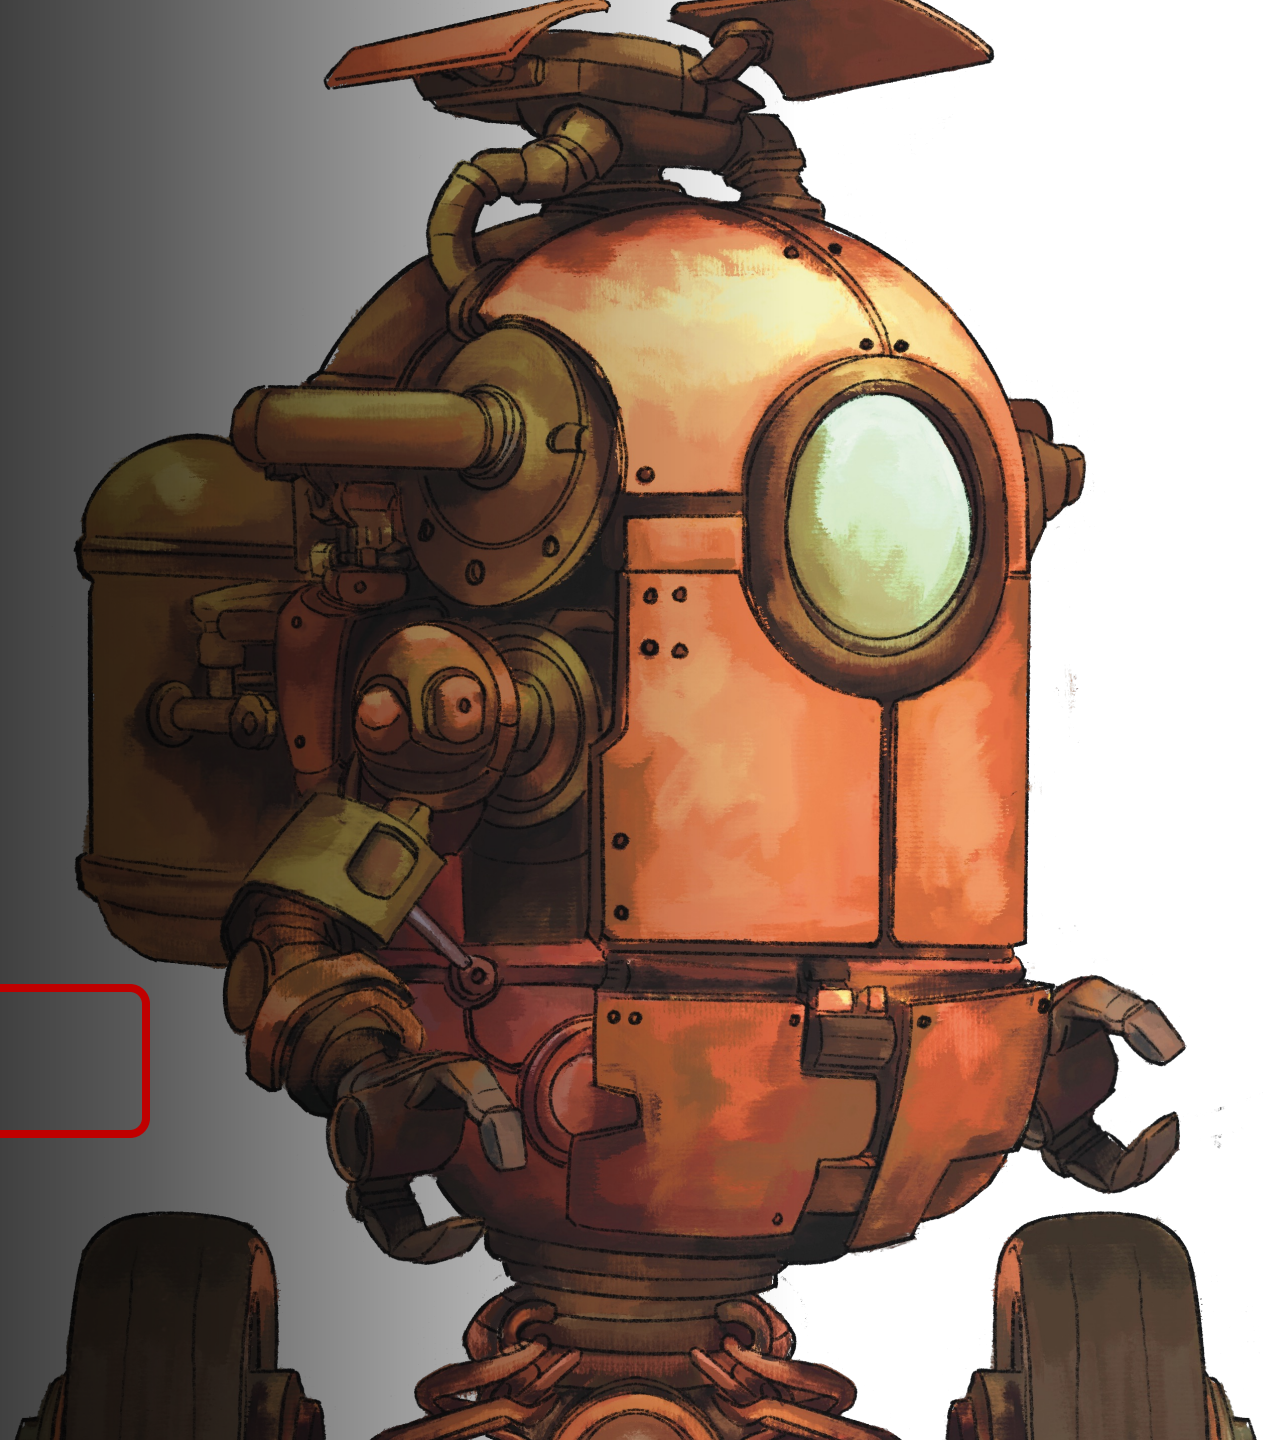

“Forward Kinematics”, in vector-form

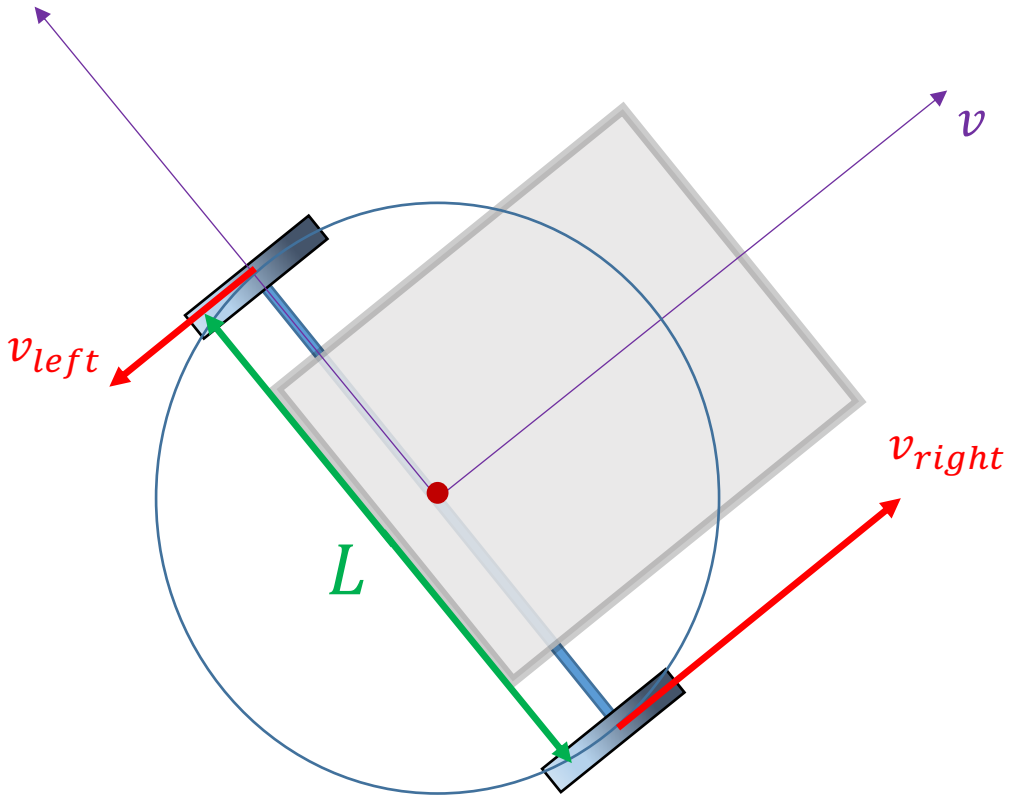


We can express these equations relative to the body-attached frame or the world frame:

$$v^{body} = \begin{bmatrix} v_x \\ v_y \\ \omega \end{bmatrix} = \begin{bmatrix} \frac{r}{2}(\dot{\phi}_R + \dot{\phi}_L) \\ 0 \\ \frac{r}{L}(\dot{\phi}_R - \dot{\phi}_L) \end{bmatrix}$$

and

$$v^{world} = \begin{bmatrix} v_x \cos\theta \\ v_x \sin\theta \\ \dot{\theta} \end{bmatrix} = \begin{bmatrix} \frac{r}{2}(\dot{\phi}_R + \dot{\phi}_L)\cos\theta \\ \frac{r}{2}(\dot{\phi}_R + \dot{\phi}_L)\sin\theta \\ \frac{r}{L}(\dot{\phi}_R - \dot{\phi}_L) \end{bmatrix}$$

Forward Kinematics Jacobians

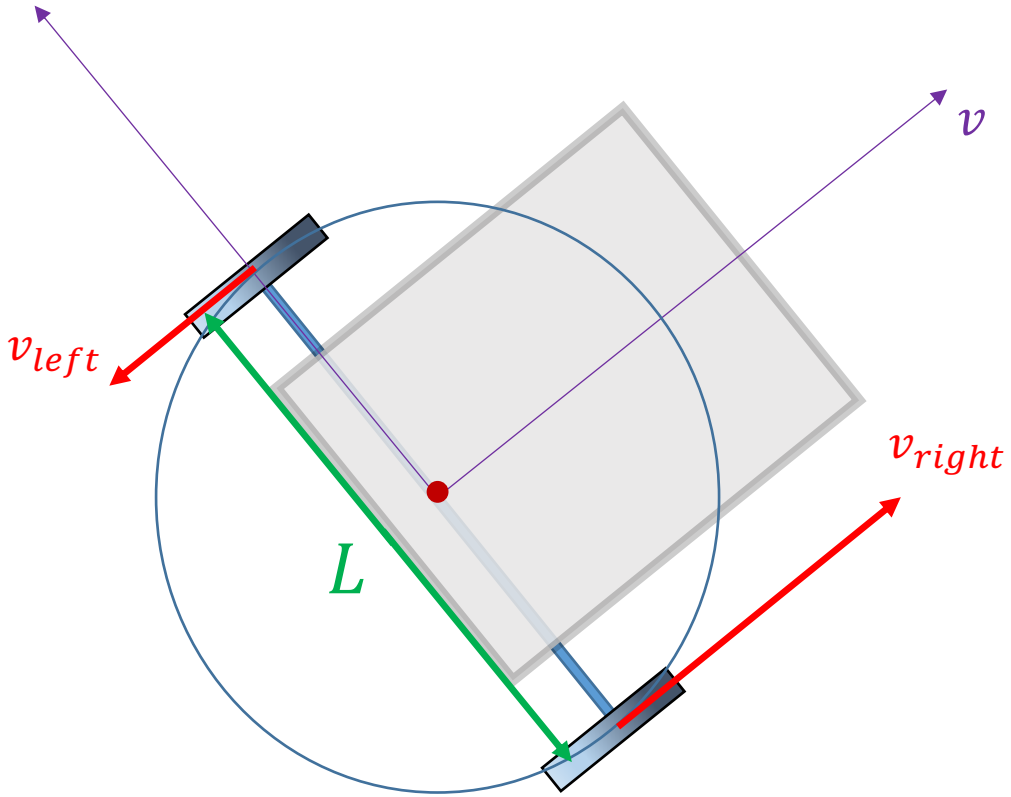

We can express these equations relative to the body-attached frame or the world frame:


$$v^{body} = \begin{bmatrix} v_x^{body} \\ v_y^{body} \\ \omega^{body} \end{bmatrix} = \frac{r}{2} \begin{bmatrix} 1 & 1 \\ 0 & 0 \\ 2/L & -2/L \end{bmatrix} \begin{bmatrix} \dot{\phi}_R \\ \dot{\phi}_L \end{bmatrix}$$

and

These are 3x2 Jacobians

$$v^{world} = \begin{bmatrix} v_x^{world} \\ v_y^{world} \\ \omega^{world} \end{bmatrix} = \frac{r}{2} \begin{bmatrix} \cos\theta & \cos\theta \\ \sin\theta & \sin\theta \\ 2/L & -2/L \end{bmatrix} \begin{bmatrix} \dot{\phi}_R \\ \dot{\phi}_L \end{bmatrix}$$

“Inverse Kinematics” Jacobians

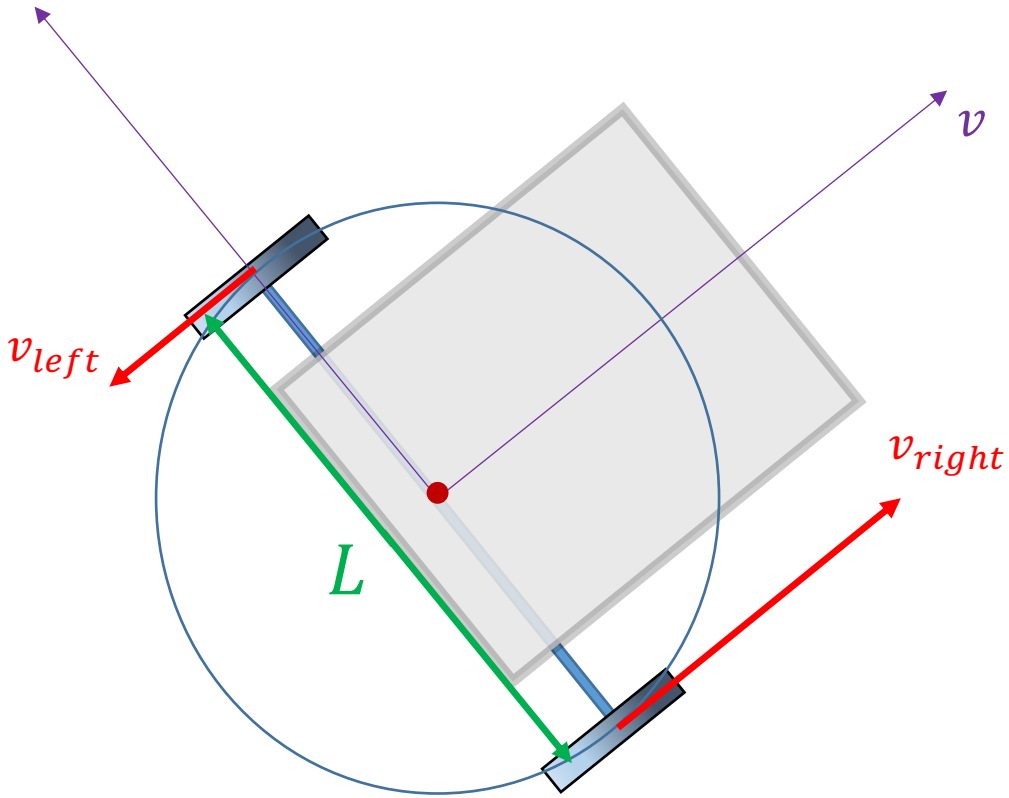

Forward:

$$v^{body} = \begin{bmatrix} v_x^{body} \\ v_y^{body} \\ \omega^{body} \end{bmatrix} = \frac{r}{2}\begin{bmatrix} 1 & 1 \\ 0 & 0 \\ 2/L & -2/L \end{bmatrix}\begin{bmatrix} \dot{\phi}_R \\ \dot{\phi}_L \end{bmatrix}$$


Inverse: $\dot{\phi}_R = \frac{L}{2}\frac{\omega}{r} + \frac{v_x}{r}$ and $\dot{\phi}_L = -\frac{L}{2}\frac{\omega}{r} + \frac{v_x}{r}$

$$\begin{bmatrix} \dot{\phi}_R \\ \dot{\phi}_L \end{bmatrix} = \frac{1}{r}\begin{bmatrix} 1 & L/2 \\ 1 & -L/2 \end{bmatrix}\begin{bmatrix} v_x^{body} \\ \omega^{body} \end{bmatrix}$$

Inverse is 2x2: no side-slip allowed!

Both Jacobians are *constant* in body frame !

“Inverse Kinematics” Jacobians in world frame

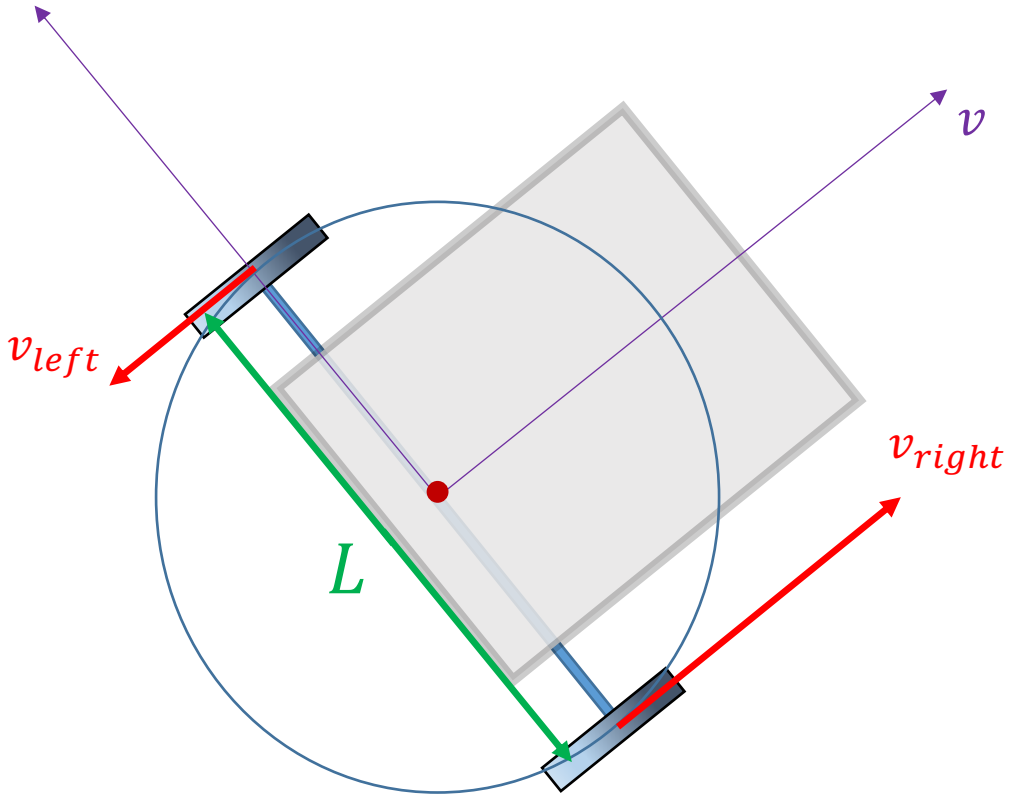

Forward:

Nonlinear in θ

$$v^{world} = \begin{bmatrix} v_x^{world} \\ v_y^{world} \\ \omega^{world} \end{bmatrix} = \frac{r}{2} \begin{bmatrix} \cos\theta & \cos\theta \\ \sin\theta & \sin\theta \\ 2/L & -2/L \end{bmatrix} \begin{bmatrix} \dot{\phi}_R \\ \dot{\phi}_L \end{bmatrix}$$

Inverse:

Does not exist!
Not all world velocities
can be realized using a DDR!